

DENON

Control Dock for iPod® ASD-3N

Owner's Manual
Bedienungsanleitung
Manuel de l'Utilisateur
Manuale delle istruzioni
Manual del usuario
Gebruiksaanwijzing
Bruksanvisning



iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

GUI *Graphical User Interface*

English

Use this manual in combination with the operating guide displayed on the GUI screen.

GUI Menu Operations (👉 page 9)
GUI Menu Map (👉 page 10)

Deutsch

Verwenden Sie dieses Handbuch zusammen mit den Bedienungsanweisungen auf dem GUI-Bildschirm.

GUI-Menübedienung (👉 Seite 9)
GUI-Menüplan (👉 Seite 10)

Français

Utilisez ce manuel en même temps que le guide d'utilisation affiché sur l'écran GUI (Interface graphique).

Fonctionnement du menu de l'interface graphique GUI (👉 page 9)
Plan du menu de l'interface graphique GUI (👉 page 10)

Italiano

Usare questo manuale insieme alla guida operativa visualizzata sulla schermata GUI.

Operazioni menu GUI (👉 pagina 9)
Mappa menu GUI (👉 pagina 10)

Español

Utilice este manual conjuntamente con la guía de uso que aparece en la pantalla GUI.

Uso de los menús GUI (👉 página 9)
Estructura de los menús GUI (👉 página 10)

Nederlands

Gebruik deze gebruiksaanwijzing samen met de aanwijzingen die op het GUI-scherm worden getoond.

Het GUI menu bedienen (👉 blz. 9)
Overzicht van het GUI menu (👉 blz. 10)

Svenska

Använd denna bruksanvisning i kombination med anvisningarna på GUI-skärmen.


Användning av GUI-menynerna (👉 sidan 9)
GUI-menyöversikt (👉 sidan 10)

SAFETY INSTRUCTIONS

1. Read Instructions – All the safety and operating instructions should be read before the product is operated.
2. Retain Instructions – The safety and operating instructions should be retained for future reference.
3. Heed Warnings – All warnings on the product and in the operating instructions should be adhered to.
4. Follow Instructions – All operating and use instructions should be followed.
5. Cleaning – Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners.
6. Attachments – Do not use attachments not recommended by the product manufacturer as they may cause hazards.
7. Water and Moisture – Do not use this product near water – for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.
8. Accessories – Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
9. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
10. Ventilation – Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
11. Power Sources – This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.



12. Grounding or Polarization – This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

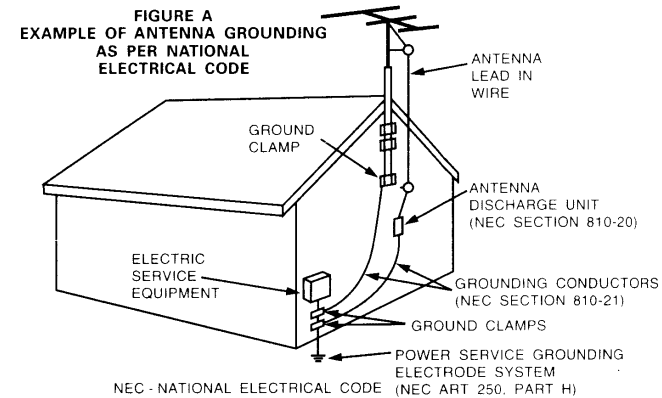

13. Power-Cord Protection – Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.
14. Outdoor Antenna Grounding – If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure A.
15. Lightning – For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
16. Power Lines – An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

17. Overloading – Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
18. Object and Liquid Entry – Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
19. Servicing – Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
20. Damage Requiring Service – Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) When the power-supply cord or plug is damaged,
 - b) If liquid has been spilled, or objects have fallen into the product,
 - c) If the product has been exposed to rain or water,
 - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation,
 - e) If the product has been dropped or damaged in any way, and
 - f) When the product exhibits a distinct change in performance – this indicates a need for service.
21. Replacement Parts – When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
22. Safety Check – Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
23. Wall or Ceiling Mounting – The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
24. Heat – The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

FCC INFORMATION (For US customers)

1. COMPLIANCE INFORMATION

Product Name: Control Dock for iPod
Model Number: ASD-3N

This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this product may not cause harmful interference, and (2) this product must accept any interference received, including interference that may cause undesired operation.

Denon Electronics (USA), LLC
(a D & M Holdings Company)

100 Corporate Drive
Mahwah, NJ 07430-2041
Tel. (800) 497-8921

2. IMPORTANT NOTICE: DO NOT MODIFY THIS PRODUCT

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modification not expressly approved by DENON may void your authority, granted by the FCC, to use the product.

3. NOTE

This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the local retailer authorized to distribute this type of product or an experienced radio/TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

• **DECLARATION OF CONFORMITY**

We declare under our sole responsibility that this product, to which this declaration relates, is in conformity with the following standards:

EN60950, EN55022, EN55024, EN61000-3-2 and EN61000-3-3.

Following the provisions of 2006/95/EC and 2004/108/EC Directive.

• **ÜBEREINSTIMMUNGSERKLÄRUNG**

Wir erklären unter unserer Verantwortung, daß dieses Produkt, auf das sich diese Erklärung bezieht, den folgenden Standards entspricht:

EN60950, EN55022, EN55024, EN61000-3-2 und EN61000-3-3.

Entspricht den Verordnungen der Direktive 2006/95/EC und 2004/108/EC.

• **DECLARATION DE CONFORMITE**

Nous déclarons sous notre seule responsabilité que l'appareil, auquel se réfère cette déclaration, est conforme aux standards suivants:

EN60950, EN55022, EN55024, EN61000-3-2 et EN61000-3-3.

D'après les dispositions de la Directive 2006/95/EC et 2004/108/EC.

• **DICHIARAZIONE DI CONFORMITÀ**

Dichiariamo con piena responsabilità che questo prodotto, al quale la nostra dichiarazione si riferisce, è conforme alle seguenti normative:

EN60950, EN55022, EN55024, EN61000-3-2 e EN61000-3-3.

In conformità con le condizioni delle direttive 2006/95/EC e 2004/108/EC.

QUESTO PRODOTTO E' CONFORME

AL D.M. 28/08/95 N. 548

• **DECLARACIÓN DE CONFORMIDAD**

Declaramos bajo nuestra exclusiva responsabilidad que este producto al que hace referencia esta declaración, está conforme con los siguientes estándares:

EN60950, EN55022, EN55024, EN61000-3-2 y EN61000-3-3.

Siguiendo las provisiones de las Directivas 2006/95/EC y 2004/108/EC.

• **EENVORMIGHEIDSVKLAARING**

Wij verklaren uitsluitend op onze verantwoordelijkheid dat dit produkt, waarop deze verklaring betrekking heeft, in overeenstemming is met de volgende normen:

EN60950, EN55022, EN55024, EN61000-3-2 en EN61000-3-3.

Volgens de bepalingen van de Richtlijnen 2006/95/EC en 2004/108/EC.

• **ÖVERENSSTÄMMELSESINTYG**

Härmed intygas helt på eget ansvar att denna produkt, vilken detta intyg avser, uppfyller följande standarder:

EN60950, EN55022, EN55024, EN61000-3-2 och EN61000-3-3.

Enligt stadgarna i direktiv 2006/95/EC och 2004/108/EC.

DENON EUROPE

Division of D&M Germany GmbH

An der Landwehr 19, Nettetal,

D-41334 Germany

CAUTION:

To completely disconnect this product from the mains, disconnect the plug from the wall socket outlet.

The mains plug is used to completely interrupt the power supply to the unit and must be within easy access by the user.

VORSICHT:

Um dieses Gerät vollständig von der Stromversorgung abzutrennen, ziehen Sie bitte den Stecker aus der Wandsteckdose.

Der Netzstecker wird verwendet, um die Stromversorgung zum Gerät völlig zu unterbrechen; er muss für den Benutzer gut und einfach zu erreichen sein.

PRECAUTION:

Pour déconnecter complètement ce produit du courant secteur, débranchez la prise de la prise murale.

La prise secteur est utilisée pour couper complètement l'alimentation de l'appareil et l'utilisateur doit pouvoir y accéder facilement.

ATTENZIONE:

Per scollegare completamente questo prodotto dalla rete di alimentazione elettrica, scollegare la spina dalla relativa presa a muro.

La spina di rete viene utilizzata per interrompere completamente l'alimentazione all'unità e deve essere facilmente accessibile all'utente.

PRECAUCIÓN:

Para desconectar completamente este producto de la alimentación eléctrica, desconecte el enchufe del enchufe de la pared.

El enchufe de la alimentación eléctrica se utiliza para interrumpir por completo el suministro de alimentación eléctrica a la unidad y debe de encontrarse en un lugar al que el usuario tenga fácil acceso.

WAARSCHUWING:

Om de voeding van dit product volledig te onderbreken moet de stekker uit het stopcontact worden getrokken.

De netstekker wordt gebruikt om de stroomtoevoer naar het toestel volledig te onderbreken en moet voor de gebruiker gemakkelijk bereikbaar zijn.

FÖRSIKTIGHETSMÅTT:

Koppla loss stickproppen från eluttaget för att helt skilja produkten från nätet.

Stickproppen används för att helt bryta strömförsörjningen till apparaten, och den måste vara lättillgänglig för användaren.

CAUTION:

- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the unit.
- Observe and follow local regulations regarding battery disposal.
- Do not expose the unit to dripping or splashing fluids.
- Do not place objects filled with liquids, such as vases, on the unit.

ACHTUNG:

- Die Belüftung sollte auf keinen Fall durch das Abdecken der Belüftungsöffnungen durch Gegenstände wie beispielsweise Zeitungen, Tischtücher, Vorhänge o. Ä. behindert werden.
- Auf dem Gerät sollten keinerlei direkte Feuerquellen wie beispielsweise angezündete Kerzen aufgestellt werden.
- Bitte beachten Sie bei der Entsorgung der Batterien die örtlich geltenden Umweltbestimmungen.
- Das Gerät sollte keiner tropfenden oder spritzenden Flüssigkeit ausgesetzt werden.
- Auf dem Gerät sollten keine mit Flüssigkeit gefüllten Behälter wie beispielsweise Vasen aufgestellt werden.

ATTENTION:

- La ventilation ne doit pas être gênée en recouvrant les ouvertures de la ventilation avec des objets tels que journaux, rideaux, tissus, etc.
- Aucune flamme nue, par exemple une bougie, ne doit être placée sur l'appareil.
- Veuillez à respecter les lois en vigueur lorsque vous jetez les piles usagées.
- L'appareil ne doit pas être exposé à l'eau ou à l'humidité.
- Ne pas poser d'objet contenant du liquide, par exemple un vase, sur l'appareil.

ATTENZIONE:

- Le aperture di ventilazione non devono essere ostruite coprendole con oggetti, quali giornali, tovaglie, tende e così via.
- Non posizionate sull'unità fiamme libere, come ad esempio candele accese.
- Prestate attenzione agli aspetti legati alla tutela dell'ambiente nello smaltimento delle batterie.
- L'apparecchiatura non deve essere esposta a gocciolii o spruzzi.
- Non posizionate sull'unità alcun oggetto contenente liquidi, come ad esempio i vasi.

PRECAUCIÓN:

- La ventilación no debe quedar obstruida por haberse cubierto las aperturas con objetos como periódicos, manteles, cortinas, etc.
- No debe colocarse sobre el aparato ninguna fuente inflamable sin protección, como velas encendidas.
- A la hora de deshacerse de las pilas, respete la normativa para el cuidado del medio ambiente.
- No exponer el aparato al goteo o salpicaduras cuando se utilice.
- No colocar sobre el aparato objetos llenos de líquido, como jarros.

WAARSCHUWING:

- De ventilatie mag niet worden belemmerd door de ventilatieopening af te dekken met bijvoorbeeld kranten, een tafelkleed, gordijnen, enz.
- Plaats geen open vlammen, bijvoorbeeld een brandende kaars, op het apparaat.
- Houd u steeds aan de milieuvoorschriften wanneer u gebruikte batterijen wegdoet.
- Stel het apparaat niet bloot aan druppels of spatten.
- Plaats geen voorwerpen gevuld met water, bijvoorbeeld een vaas, op het apparaat.

OBSERVERA:

- Ventilationen bör inte förhindras genom att täcka för ventilationsöppningarna med föremål såsom tidningar, bordsdukar, gardiner osv.
- Inga blottade brandkällor, såsom tända ljus, får placeras på apparaten.
- Tänk på miljöaspekterna när du bortskaffar batterier.
- Apparaten får inte utsättas för vätska.
- Placera inte föremål fyllda med vätska, t.ex. vaser, på apparaten.

NOTE ON USE

- Avoid high temperatures.
Allow for sufficient heat dispersion when installed in a rack.
- Handle the power cord carefully.
Hold the plug when unplugging the cord.
- Keep the unit free from moisture, water, and dust.
- Unplug the power cord when not using the unit for long periods of time.
- Do not obstruct the ventilation holes.
- Do not let foreign objects into the unit.
- Do not let insecticides, benzene, and thinner come in contact with the unit.
- Never disassemble or modify the unit in any way.

HINWEISE ZUM GEBRAUCH

- Vermeiden Sie hohe Temperaturen.
Beachten Sie, dass eine ausreichende Belüftung gewährleistet wird, wenn das Gerät auf ein Regal gestellt wird.
- Gehen Sie vorsichtig mit dem Netzkabel um.
Halten Sie das Kabel am Stecker, wenn Sie den Stecker herausziehen.
- Halten Sie das Gerät von Feuchtigkeit, Wasser und Staub fern.
- Wenn das Gerät längere Zeit nicht verwendet werden soll, trennen Sie das Netzkabel vom Netzstecker.
- Decken Sie den Lüftungsbereich nicht ab.
- Lassen Sie keine fremden Gegenstände in das Gerät kommen.
- Lassen Sie das Gerät nicht mit Insektiziden, Benzin oder Verdünnungsmitteln in Berührung kommen.
- Versuchen Sie niemals das Gerät auseinander zu nehmen oder zu verändern.

OBSERVATIONS RELATIVES A L'UTILISATION

- Eviter des températures élevées.
Tenir compte d'une dispersion de chaleur suffisante lors de l'installation sur une étagère.
- Manipuler le cordon d'alimentation avec précaution.
Tenir la prise lors du débranchement du cordon.
- Protéger l'appareil contre l'humidité, l'eau et la poussière.
- Débrancher le cordon d'alimentation lorsque l'appareil n'est pas utilisé pendant de longues périodes.
- Ne pas obstruer les trous d'aération.
- Ne pas laisser des objets étrangers dans l'appareil.
- Ne pas mettre en contact des insecticides, du benzène et un diluant avec l'appareil.
- Ne jamais démonter ou modifier l'appareil d'une manière ou d'une autre.

NOTE SULL'USO

- Evitate di esporre l'unità a temperature elevate.
Assicuratevi che vi sia un'adeguata dispersione del calore quando installate l'unità in un mobile per componenti audio.
- Manneggiate il cavo di alimentazione con attenzione.
Tenete ferma la spina quando scollegate il cavo dalla presa.
- Tenete l'unità lontana dall'umidità, dall'acqua e dalla polvere.
- Scollegate il cavo di alimentazione quando prevedete di non utilizzare l'unità per un lungo periodo di tempo.
- Non coprite i fori di ventilazione.
- Non inserite corpi estranei all'interno dell'unità.
- Assicuratevi che l'unità non entri in contatto con insetticidi, benzolo o solventi.
- Non smontate né modificate l'unità in alcun modo.

NOTAS SOBRE EL USO

- Evite altas temperaturas.
Permite la suficiente dispersión del calor cuando está instalado en la consola.
- Maneje el cordón de energía con cuidado.
Sostenga el enchufe cuando desconecte el cordón de energía.
- Mantenga el equipo libre de humedad, agua y polvo.
- Desconecte el cordón de energía cuando no utilice el equipo por mucho tiempo.
- No obstruya los orificios de ventilación.
- No deje objetos extraños dentro del equipo.
- No permita el contacto de insecticidas, gasolina y diluyentes con el equipo.
- Nunca desarme o modifique el equipo de ninguna manera.

ALVORENSTE GEBRUIKEN

- Vermijd hoge temperaturen.
Zorg er bij installatie in een audiorack voor, dat de door het toestel geproduceerde warmte goed kan worden afgevoerd.
- Hanteer het netsnoer voorzichtig.
Houd het snoer bij de stekker vast wanneer deze moet worden aan- of losgekoppeld.
- Laat geen vochtigheid, water of stof in het apparaat binnendringen.
- Neem altijd het netsnoer uit het stopkontakt wanneer het apparaat gedurende een lange periode niet wordt gebruikt.
- De ventilatieopeningen mogen niet worden geblokkeerd.
- Laat geen vreemde voorwerpen in dit apparaat vallen.
- Voorkom dat insecticiden, benzeen of verfverdunder met dit toestel in contact komen.
- Dit toestel mag niet gedemonteerd of aangepast worden.

OBSERVERA ANGÅENDE ANVÄNDNINGEN

- Undvik höga temperaturer.
Se till att det finns möjlighet till god värmeavledning vid montering i ett rack.
- Hantera nätkabeln varsamt.
Håll i kabeln när den kopplas från el-uttaget.
- Utsätt inte apparaten för fukt, vatten och damm.
- Koppla loss nätkabeln om apparaten inte kommer att användas i lång tid.
- Tapp inte till ventilationsöppningarna.
- Se till att främmande föremål inte tränger in i apparaten.
- Se till att inte insektsmedel på spraybruk, bensen och thinner kommer i kontakt med apparatens hölje.
- Ta inte isär apparaten och försök inte bygga om den.

A NOTE ABOUT RECYCLING:

This product's packaging materials are recyclable and can be reused. Please dispose of any materials in accordance with the local recycling regulations.

When discarding the unit, comply with local rules or regulations. Batteries should never be thrown away or incinerated but disposed of in accordance with the local regulations concerning battery disposal.

This product and the supplied accessories, excluding the batteries, constitute the applicable product according to the WEEE directive.



HINWEIS ZUM RECYCLING:

Das Verpackungsmaterial dieses Produktes ist zum Recyceln geeignet und kann wieder verwendet werden. Bitte entsorgen Sie alle Materialien entsprechend der örtlichen Recycling-Vorschriften.

Beachten Sie bei der Entsorgung des Gerätes die örtlichen Vorschriften und Bestimmungen.

Die Batterien dürfen nicht in den Hausmüll geworfen oder verbrannt werden; bitte entsorgen Sie die Batterien gemäß der örtlichen Vorschriften.

Dieses Produkt und das im Lieferumfang enthaltene Zubehör (mit Ausnahme der Batterien!) entsprechen der WEEE-Direktive.

UNE REMARQUE CONCERNANT LE RECYCLAGE:

Les matériaux d'emballage de ce produit sont recyclables et peuvent être réutilisés. Veuillez disposer des matériaux conformément aux lois sur le recyclage en vigueur.

Lorsque vous mettez cet appareil au rebut, respectez les lois ou réglementations en vigueur.

Les piles ne doivent jamais être jetées ou incinérées, mais mises au rebut conformément aux lois en vigueur sur la mise au rebut des piles.

Ce produit et les accessoires inclus, à l'exception des piles, sont des produits conformes à la directive DEEE.

NOTA RELATIVA AL RICICLAGGIO:

I materiali di imballaggio di questo prodotto sono riutilizzabili e riciclabili. Smaltire i materiali conformemente alle normative locali sul riciclaggio.

Per lo smaltimento dell'unità, osservare le normative o le leggi locali in vigore.

Non gettare le batterie, né incenerirle, ma smaltirle conformemente alla normativa locale sui rifiuti chimici.

Questo prodotto e gli accessori inclusi nell'imballaggio sono applicabili alla direttiva RAEE, ad eccezione delle batterie.

ACERCA DEL RECICLAJE:

Los materiales de embalaje de este producto son reciclables y se pueden volver a utilizar. Disponga de estos materiales siguiendo los reglamentos de reciclaje de su localidad.

Cuando se deshaga de la unidad, cumpla con las reglas o reglamentos locales. Las pilas nunca deberán tirarse ni incinerarse. Deberá disponer de ellas siguiendo los reglamentos de su localidad relacionados con los desperdicios químicos.

Este producto junto con los accesorios empaquetados es el producto aplicable a la directiva RAEE excepto pilas.

EEN AANTEKENING MET BETREKKING TOT DE RECYCLING:

Het inpakmateriaal van dit product is recycleerbaar en kan opnieuw gebruikt worden. Er wordt verzocht om zich van elk afvalmateriaal te ontdoen volgens de plaatselijke voorschriften.

Volg voor het wegdoen van de speler de voorschriften voor de verwijdering van wit- en bruingoed op.

Batterijen mogen nooit worden weggegooid of verbrand, maar moeten volgens de plaatselijke voorschriften betreffende chemisch afval worden verwijderd.

Op dit product en de meegeleverde accessoires, m.u.v. de batterijen is de richtlijn voor afgedankte elektrische en elektronische apparaten (WEEE) van toepassing.

OBSERVERA ANGÅENDE ÅTERVINNING:

Produktens emballage är återvinningsbart och kan återanvändas. Kassera det enligt lokala återvinningsbestämmelser.

När du kasserar enheten ska du göra det i överensstämmelse med lokala regler och bestämmelser.

Batterier får absolut inte kastas i soporna eller brännas. Kassera dem enligt lokala bestämmelser för kemiskt avfall.

Denna apparat och de tillbehör som levereras med den uppfyller gällande WEEE-direktiv, med undantag av batterierna.

Contents

Getting Started

Accessories	2
Cautions on Handling	2
About the Remote Control Unit	2, 3
Before Using.....	2
Inserting the Battery.....	3
Operating Range of the Remote Control Unit.....	3
Part Names and Functions	4
Top Panel / Front Panel.....	4
Rear Panel.....	4
Remote Control Unit.....	4

Connections

Mounting the universal adapter on the control dock	5
Connection to devices equipped with Dock Control or LAN	6
Network Audio.....	7, 8

GUI Menu Operations

Example of the Display of the GUI Mark at a Title	9
Example of Display of Default Values	9
Examples of GUI Screen Displays	9
Example: Browse Menu (Top Menu).....	9
Cursor Position Display.....	10
Operations	10
GUI Menu Map	10

Setup

Network	11
1 Network Setup.....	11
2 Network Information.....	11

GUI	12
1 Screensaver.....	12
2 Format.....	12
3 GUI time out.....	12
Language	12
Other	13
1 iPod Charge.....	13
2 Slide Show.....	13
3 Interval.....	13
4 Repeat.....	13
5 Random.....	13
6 Firmware Update.....	13

Playback

iPod® Playback	14
Preparations.....	14
Playback Music and Video.....	14, 15
Viewing Still Pictures or Videos on the iPod.....	15
Playing Network Audio	15, 16
Basic Operation.....	17
Listening to Internet Radio.....	18
Registering Internet Radio Stations as Your Favorites.....	18, 19
Playing Files Stored on a Computer.....	19, 20

Other Information	20
--------------------------------	----

Troubleshooting	21, 22
------------------------------	--------

Specifications	23
-----------------------------	----


Getting Started

Thank you for purchasing this DENON product. To ensure proper operation, please read these owner's manual carefully before using the product. After reading them, be sure to keep them for future reference.


Accessories

Check that the following parts are supplied with the product.


- ① Owner's manual..... 1
- ② Warranty (for North America model only) 1
- ③ Service station list 1
- ④ AC Adapter (KSAFC0600150W1UV-1)..... 1
- ⑤ Remote control 1
 - RC-1087: for white model
 - RC-1088: for black model
- ⑥ Universal Adapter (3 types)..... 1 each
- ⑦ AV/Control Cable
(Cable length: Approx. 6.6 ft/2 m) 1

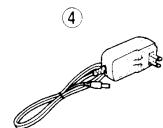

(For U.S.A. & Canada model)

 


(For Europe model)

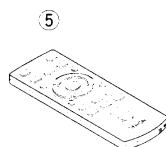

With battery



⑥

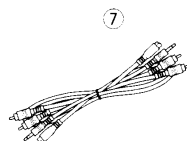

⑦

NOTE

- Do not use any AC adapter other than the specified one. Doing so could result in fires or electric shock.
- The included AC adapter is exclusively for use with this unit. Never use it with other equipment.

Cautions on Handling

Pay attention to the following before using this unit:

• Moving the unit

To prevent short-circuits or damaged wires in the connection cables, always unplug the power supply cord and disconnect the connection cables between all other audio components when moving the unit.

• Cautions on using mobile phones

Using a mobile phone near this unit may result in noise. If so, move the mobile phone away from this unit when using it.

• Store these instructions in a safe place.


After reading, store this instructions along with the warranty card in a safe place.

• Note that the illustrations in these instructions may differ from the actual unit for explanation purposes.

About the Remote Control Unit


Before Using

Remove the insulating sheet before using the remote control unit.

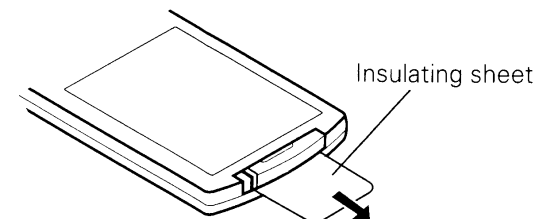

Inserting the Battery

- ① Remove the rear lid.
- ② Load the battery properly as indicated by the marks in the battery compartment.

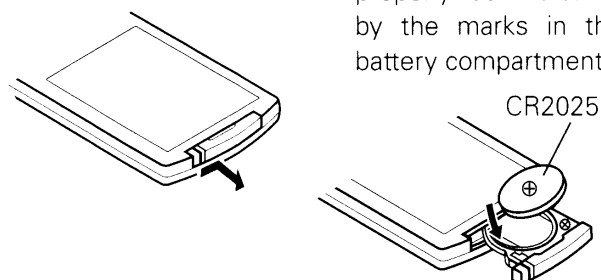

- ③ Put the rear lid back on.

NOTE


- Replace the batteries with new ones if the set does not operate even when the remote control unit is operated close to the unit.
- The supplied batteries are only for verifying operation.
- When inserting the batteries, be sure to do so in the proper direction, following the "⊕" and "⊖" marks in the battery compartment.
- To prevent damage or leakage of battery fluid:
- Do not short-circuit, disassemble, heat or dispose of batteries in flames.
- If the battery fluid should leak, carefully wipe the fluid off the inside of the battery compartment and insert new batteries.
- Remove the batteries from the remote control unit if it will not be in use for long periods.
- When replacing the batteries, have the new batteries ready and insert them as quickly as possible.

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Operating Range of the Remote Control Unit

Point the remote control unit at the remote sensor when operating it.

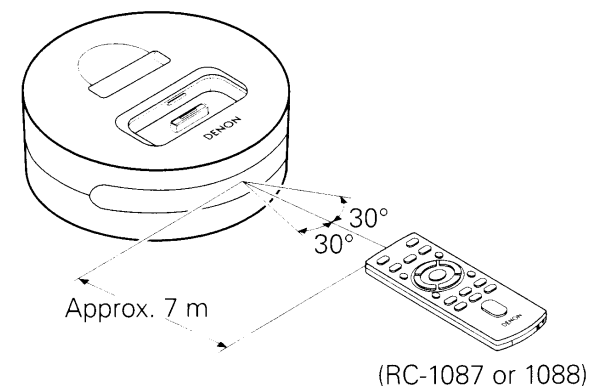


NOTE

The set may function improperly or the remote control unit may not operate if the remote control sensor is exposed to direct sunlight, strong artificial light from an inverter type fluorescent lamp or infrared light.

Part Names and Functions


For buttons not explained here, see the page indicated in parentheses ().

Top Panel / Front Panel

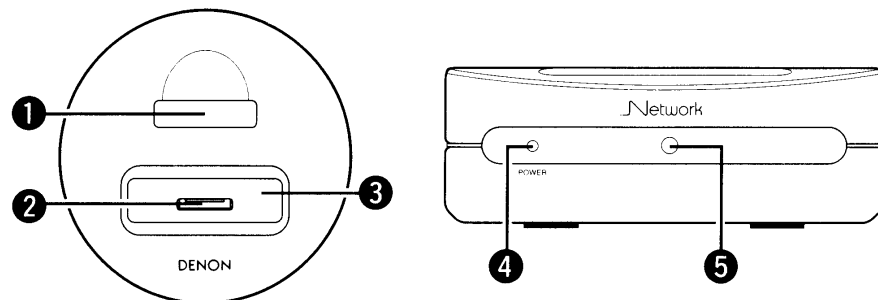


- 1 Remote control unit storage slot**
- 2 Dock connector**
- 3 Universal adapter slot** (5)
- 4 POWER indicator**
When the AC adapter plug is inserted into the wall socket, this unit is powered and the display illuminates. When the GUI and audio output stops the display is extinguished.
- 5 Remote Control sensor** (3)

Rear Panel

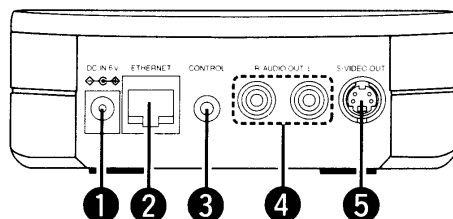

- 1 DC IN terminal** (6)
- 2 ETHERNET connector** (7)
- 3 CONTROL terminal**
(stereo mini plug) (6)
- 4 AUDIO OUT terminals** (6)
- 5 S-VIDEO OUT terminal** (6)

Remote Control Unit

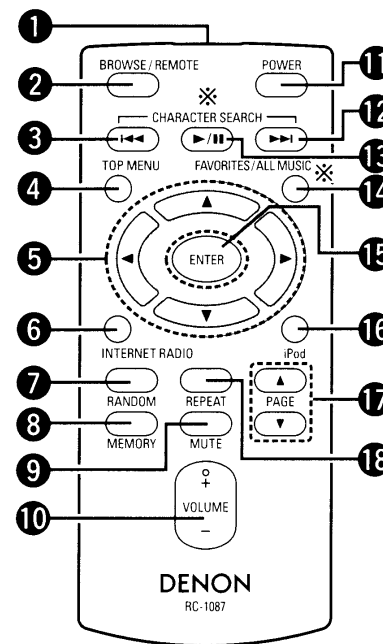

※ **CHARACTER SEARCH** and **ALL MUSIC** functions are not executed by this unit.

- 1 Remote control signal transmitter** (3)
- 2 iPod mode select button (BROWSE/REMOTE)** (15)
- 3 Skip Previous button (I<<)**
- 4 TOP MENU button** (10)
When pressed, the GUI's top menu appears on the monitor.
- 5 Cursor buttons (Δ ∇ ◀ ▶)**
- 6 INTERNET RADIO menu button** (15)
When pressed, the Internet radio menu appears on the monitor.

- 7 RANDOM button**
- 8 MEMORY button**
- 9 Muting button (MUTE)**
Turning off the sound temporarily.
- 10 VOLUME control buttons**
Use this to adjust the volume.
- 11 POWER button**
When this button is pressed, the GUI and audio outputs are stopped. Even when stopped (POWER indicator extinguished) the iPod is charged.

NOTE

While the AC adapter plug is inserted into the wall socket, this unit is in the powered state. During absence or long periods without being used, please withdraw the adapter plug from the wall socket.

- 12 Skip Next button (▶▶I)**
- 13 Play/Pause button (▶/II)**
- 14 FAVORITES/ALL MUSIC button** (18)
When pressed, the favorites folder appears on the monitor.
- 15 ENTER button** (14)
- 16 iPod menu button**
When pressed, the iPod menu appears on the monitor.
- 17 PAGE buttons (Δ ∇)**
- 18 REPEAT button**

Connections


Mount the included universal adapter suited for your iPod® to the control dock's universal adapter slot.

Mounting the universal adapter on the control dock




iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

Bottom surface of universal adapter

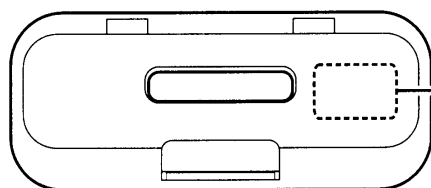

Stamped indication

Stamped indication	iPod connectable to the ASD-3N
mini	iPod mini
Photo 20, 30GB	iPod Photo 30GB/iPod 20GB with color display
Photo 60GB	iPod Photo 60GB/iPod 40GB with color display

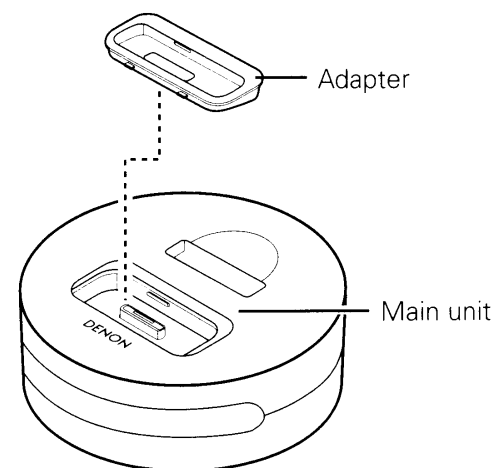


- A genuine iPod dock adapter can be mounted on this ASD-3N.
- To connect an "iPod nano" or 5th generation iPod, use the dock adapter included with the iPod.
- The 4th generation iPod (with Dock Connector) requires the Apple iPod Universal Dock Adapter 3-Pack that fits your iPod model (separately available from Apple Inc.) in order to be connected to the ASD-3N.

Connection to devices equipped with Dock Control or LAN

AC outlet (wall)

AC 120 V, 60 Hz
(For U.S.A. &
Canada model)
AC 230 V, 50 Hz
(For Europe model)

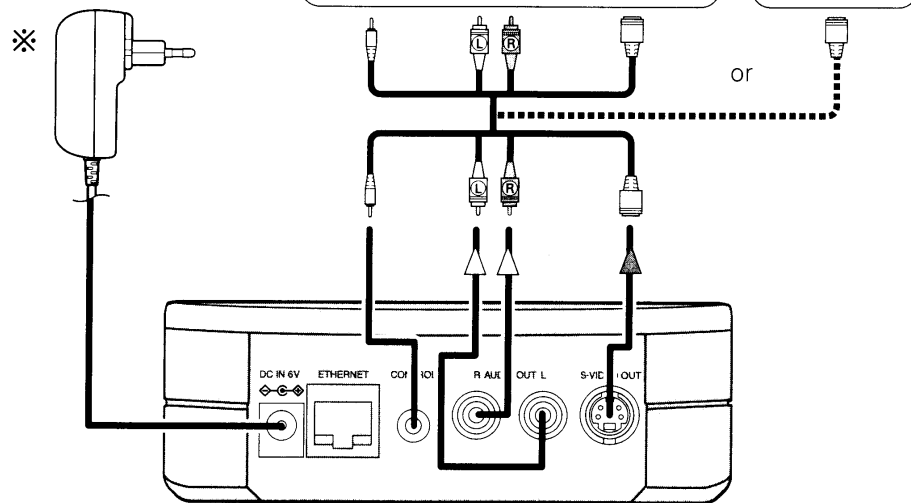

ASD-3N can be operated from an amplifier or system device equipped with a DOCK CONTROL terminal connected to the ASD-3N. Features may be limited, depending on the device connected.

Latest compatible lists <http://blog.denon.com/asd-3/>
Or contact a nearby sales agent.

NOTE


- When the DOCK CONTROL terminal is connected, the ASD-3N no longer accepts remote control commands. To use the remote control unit, point it at the remote control sensor on the connected device when operating it.
- While the AC adapter plug is inserted into the wall socket, this unit is in the powered state. During absence or long periods without being used, please withdraw the adapter plug from the wall socket.

※ When the AC adapter plug is inserted into the wall socket, this unit is powered. At this time, the POWER indicator is illuminated, and after 15 ~ 20 seconds the GUI screen is displayed in the monitor.

Signal direction	Audio signal		Video signal	
	OUT	IN	OUT	IN

Network Audio

[Wired LAN]

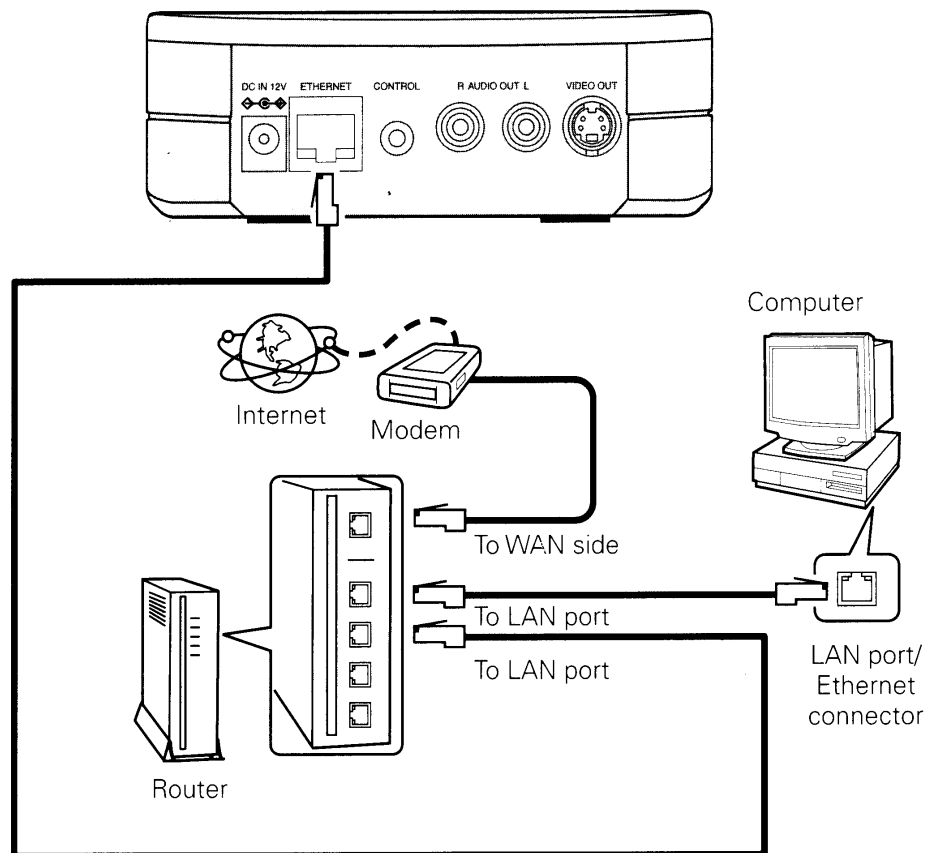

Required system

❑ Broadband Internet connection

A broadband line connection to the Internet is required in order to use the ASD-3N's Internet radio function and firmware update.

❑ Modem

This is a device that is connected to the broadband line to communicate with the Internet. Some are integrated with the router.

❑ Router

- When using the ASD-3N, we recommend you use a router equipped with the following functions:
 - Built-in DHCP (Dynamic Host Configuration Protocol) server
This function automatically assigns IP addresses on the LAN.
 - Built-in 100BASE-TX switch
When connecting multiple devices, we recommend a switching hub with a speed of 100 Mbps or greater.

❑ Ethernet cable (CAT-5 or greater recommended)

Use for wired LAN.

- The ASD-3N does not come with an Ethernet cable.
- Some flat type Ethernet cables are easily affected by noise.

We recommend using a normal type cable.

❑ Computer

A computer with the following specifications is required to use a music server:

- OS
Windows® XP Service Pack2, Windows Vista
- Software (Prepare one of the following.)
 - .NET Framework 1.1 and Windows Media Connect (Windows XP)
 - Windows Media Player ver.11
 - DLNA-compatible server software
- Internet browser
Microsoft Internet Explorer 5.01 or later
- LAN port
- 300 MB or more free disk space

※ Free disk space is required to store music and video files. The following sizes are approximate.

Format	Bit rate	Per minute	Per hour
MP3 / WMA MPEG-4 AAC	128 kbps	Approx. 1 MB	Approx. 60 MB
	192 kbps	Approx. 1.5 MB	Approx. 90 MB
	256 kbps	Approx. 2 MB	Approx. 120 MB
	392 kbps	Approx. 3 MB	Approx. 180 MB
WAV (LPCM)	1400 kbps	Approx. 10 MB	Approx. 600 MB
FLAC	1080 kbps	Approx. 7.7 MB	Approx. 464 MB



For connections to the Internet, contact an ISP (Internet Service Provider) or a computer shop.

NOTE

- A contract with an ISP is required to connect to the Internet.
No additional contract is needed if you already have a broadband connection to the Internet.
- The types of routers that can be used depend on the ISP. Contact an ISP or a computer shop for details.
- Depending on the server, video files may be displayed, but they cannot be played on the ASD-3N.

❑ Others

- If you have an Internet provider contract for a line on which network settings are made manually, make the settings at GUI menu "Setup" – "Network" – "Network Setup" (☞ page 11).
- With the ASD-3N, it is possible to use the DHCP and Auto IP functions to make the network settings automatically.
- When using a broadband router (DHCP function), the ASD-3N sets the IP address, etc., automatically.
When using the ASD-3N connected to a network with no DHCP function, make the settings for the IP address, etc., at GUI menu "Setup" – "Network" – "Network Setup" (☞ page 11).
- The ASD-3N is not compatible with PPPoE. A PPPoE-compatible router is required if you have a contract for a line of the type with which the PPPoE is set.
- Depending on the ISP with which you have your contract, it may be necessary to make proxy server settings to use the Internet radio function. If you made proxy server settings on the computer to connect to the Internet, make the proxy server settings on the ASD-3N in the same way.

GUI Menu Operations

With the ASD-3N, settings and operations for most functions can be performed by operating while looking at the GUI menus displayed on the monitor screen.

Example of the Display of the GUI Mark at a Title

Items for which this mark is indicated at the title can be operated from the GUI.
We recommend performing such operations from the GUI.

Network
Make network settings.



This is the GUI icon for this setting item or for the menu series to which this item belongs.

Example of Display of Default Values


In lists of selectable items, the item surrounded by a border is the default value.

[Selectable items] **ON** OFF

Examples of GUI Screen Displays


Some typical examples are described below.

Example: Browse Menu (Top Menu)

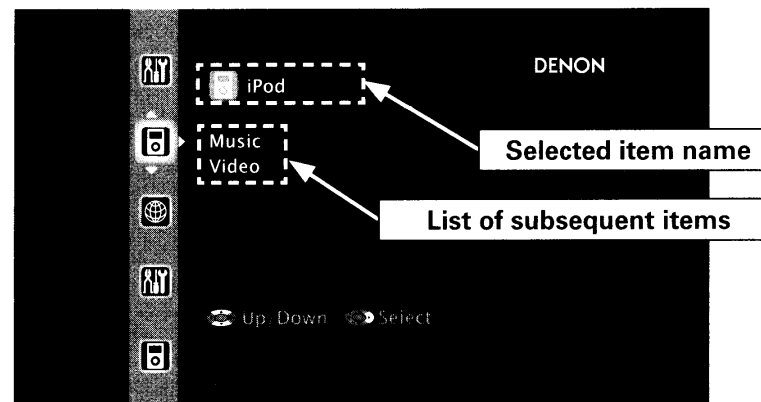


Cursor Position Display

Icon

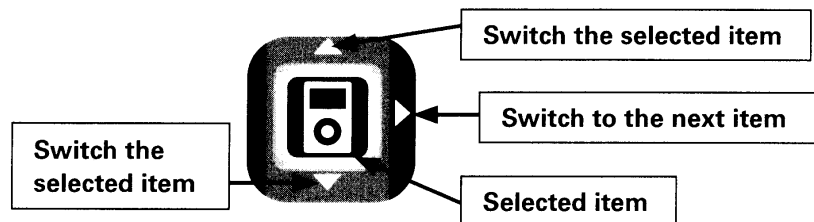

List

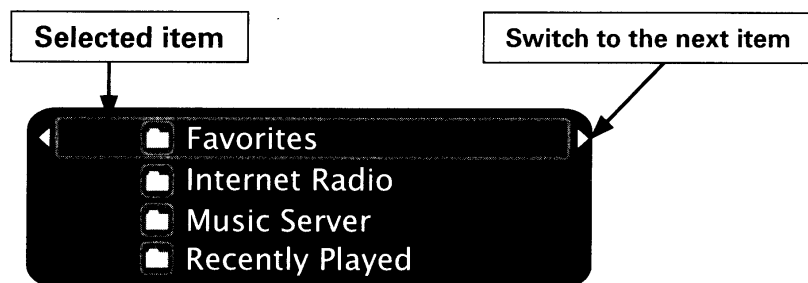

※ Switch the selected item using $\Delta \nabla$.

※ By using the **PAGE** $\Delta \nabla$ button, the list page may be sent / returned.

Operations


The same operation is possible on the remote control unit.

1 Press the $\Delta \nabla \triangleright$ button to select the menu to be set or operated.

※ To return to the previous item, press the \triangleleft button.

2 Press the **ENTER** button to enter the setting.

GUI menu map

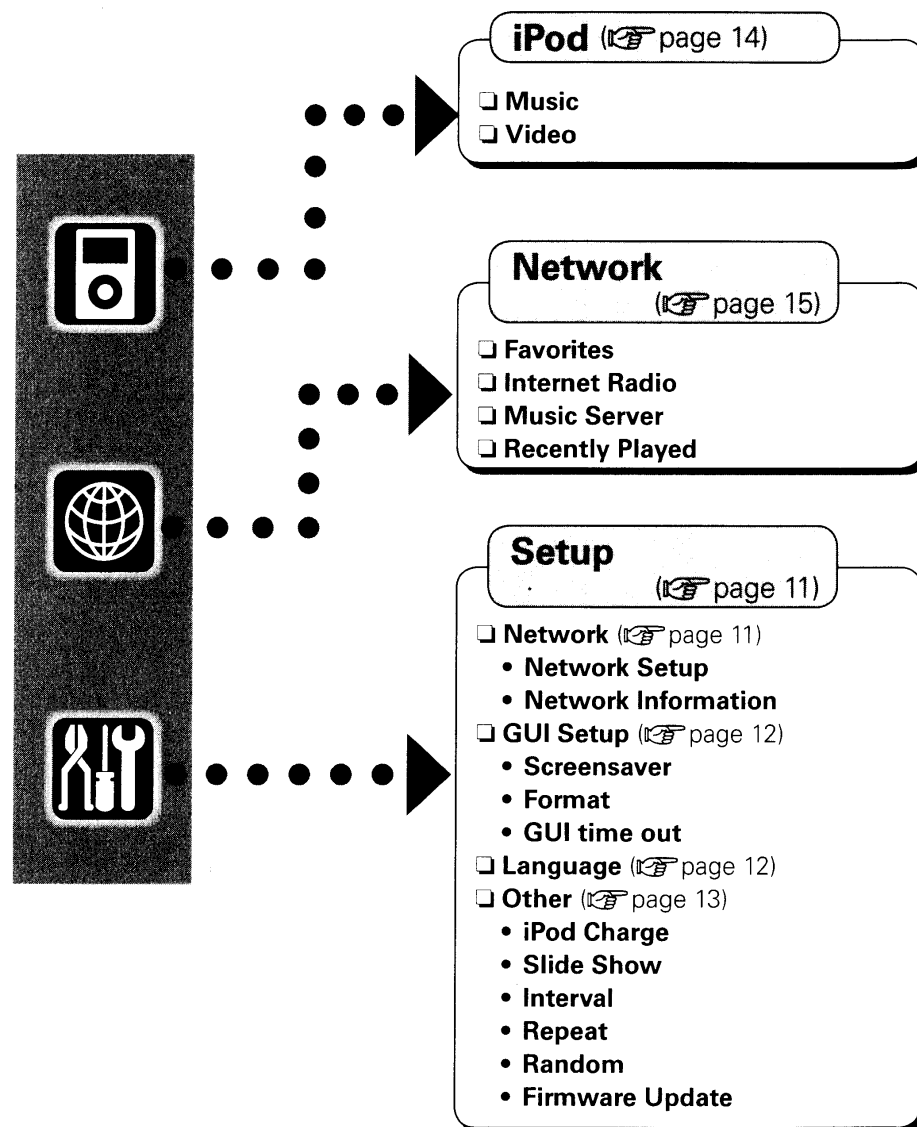

Setup



Make detail settings for various parameters.

Network

Make network settings.



Setup

Network

1 Network Setup

2 Network Information

1 Network Setup

Make settings for wired LAN.

Set according to the flowchart on the right.

2 Network Information


Display network information.

[Items to be checked]

DHCP= ON or OFF **IP Address** **MAC Address**

Wired LAN

Make settings for wired LAN.

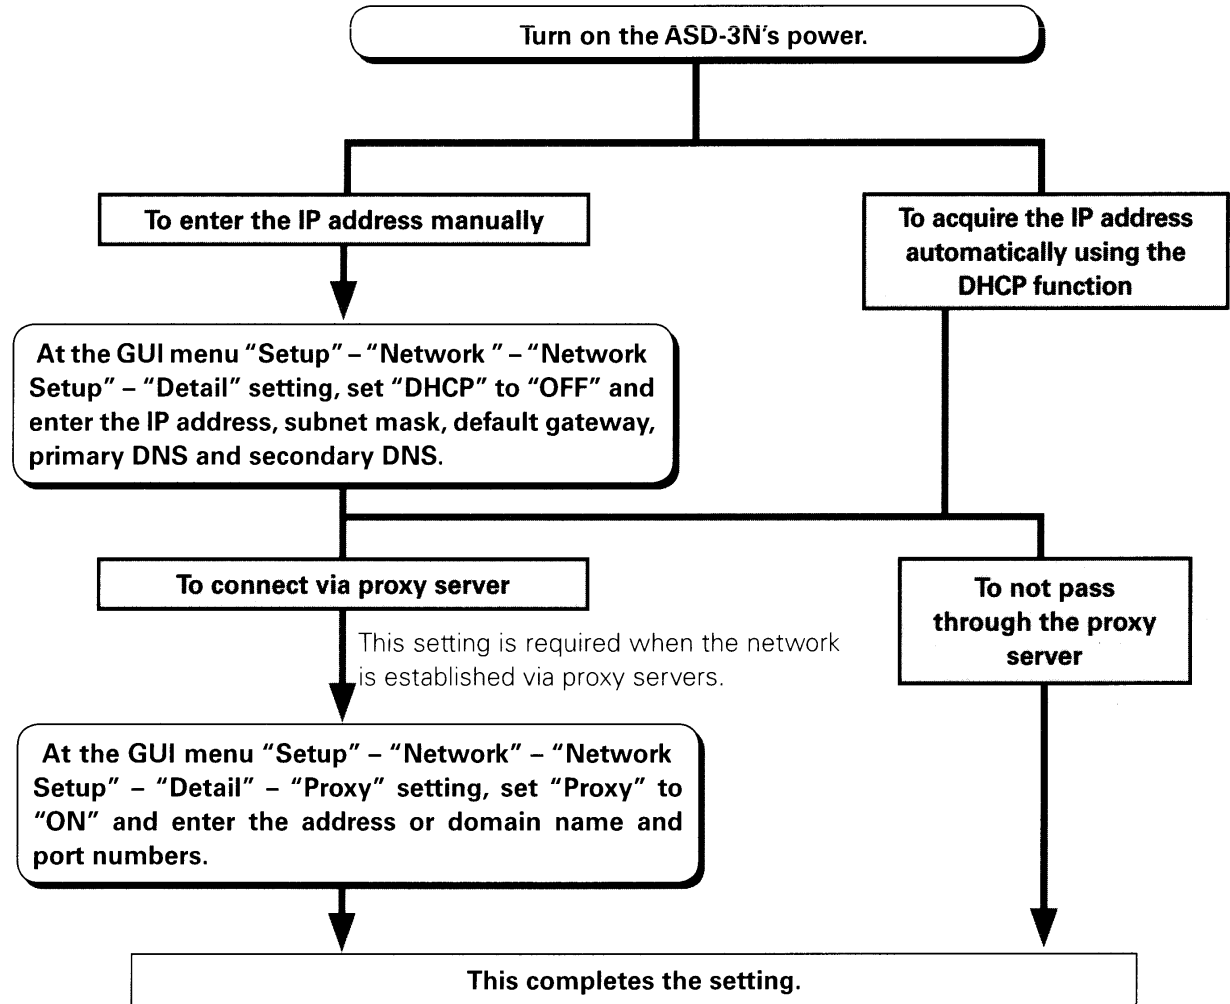

Recheck the connections and settings if you cannot connect to the Internet (☞ page 7).

NOTE

Knowledge about networks is required to make the IP address and proxy settings. For details, consult a network administrator.

GUI

Make GUI related settings.

GUI



Setup

GUI

1 Screensaver

2 Format

3 GUI time out

1 Screensaver

Make screensaver settings.

Use the screensaver to prevent burn-in on the monitor screen.

When set to "ON", the screensaver is activated if there is no activity for about 3 minutes.

[Selectable items] **ON** OFF

2 Format

Select the video output signal format to match the monitor.

[Selectable items]

NTSC PAL

※ Normally there is no need to set this.

NOTE

When a format other than the video format of the connected monitor is set, the picture will not be displayed properly. Use the procedure described below to change the video format.



Operating from the Remote Controller

[Set to NTSC]

- Press and hold the **TOP MENU** and **PAGE**△ buttons for at least 3 seconds.
"NTSC" is set.

[Set to PAL]

- Press and hold the **TOP MENU** and **PAGE**▽ buttons for at least 3 seconds.
"PAL" is set.

3 GUI time out

Set the GUI display time when not operating.

[Selectable items]

Always 30s 10s

Language

This sets the language used on the display screens

GUI



Setup

Language

[Selectable items]

English

Deutsch

Français

Español

日本語

Other

Make various other settings.



Setup

Other

1 iPod Charge

2 Slide Show

3 Interval

4 Repeat

5 Random

6 Firmware Update

1 iPod Charge

Set whether or not to charge the iPod on the ASD-3N.

[Selectable items] ☐ ON ☐ OFF

2 Slide Show

Make slideshow settings.

[Selectable items] ☐ ON ☐ OFF

3 Interval

Set the playback time per image.

[Selectable items]

5s 10s 15s 20s 30s 40s 60s

4 Repeat

Make settings for repeat mode.

[Selectable items] All One ☐ OFF

5 Random

Make settings for shuffle mode.

[Selectable items]

Songs Albums ☐ OFF (iPod)

(☐ ON) ☐ OFF (Network Audio)

※ With network audio, only the Songs Random mode works.

6 Firmware Update


Update the firmware.

Normally there is no need to use this function, aside from the cases described below.

- The Firmware Update function is only used for updating the firmware via the Internet, for example for the purpose of adding functions to the ASD-3N in the future.
- Information regarding the Firmware Update function will be announced on the DENON web site each time related plans are defined.
- A broadband connection to the Internet is required to use this function (see page 7).
- Even with a broadband connection to the Internet, approximately 1 hour is required for the updating procedure to be completed. Once updating starts, normal operations on the ASD-3N cannot be performed until updating is completed. Furthermore, updating the firmware may reset the backup data for the parameters, etc., set for the ASD-3N.

NOTE

- Connection to the network and specific settings are required to update the firmware. For details, see page 7, 11
- Do not turn off the power until updating is completed.

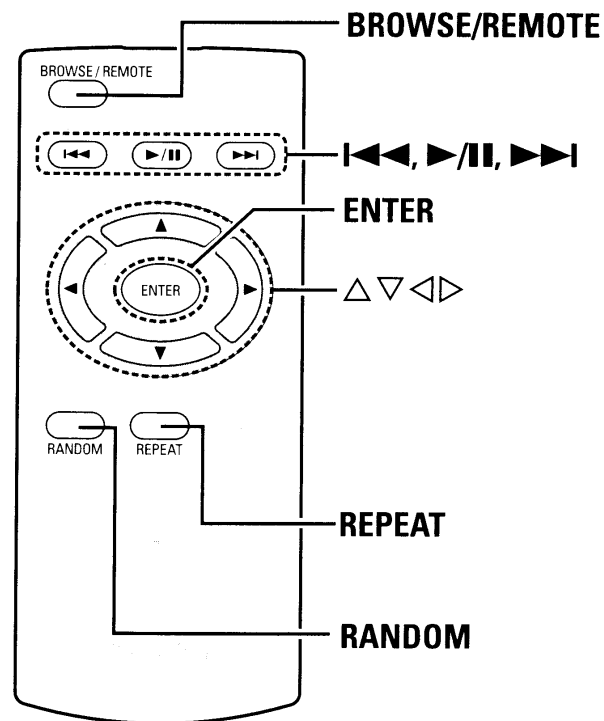

Playback

iPod® Playback




iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

※ The iPod may only be used to copy or play contents that are not copyrighted or contents for which copying or playback is legally permitted for your private use as an individual. Be sure to comply with applicable copyright legislation.

Preparations

Load the iPod onto the ASD-3N.

① Set the iPod in the ASD-3N.

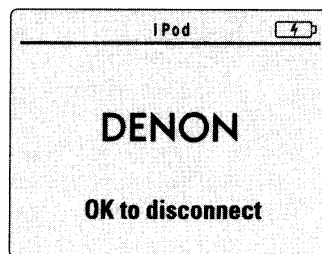

(iPod screen)

※ If the screens above are not displayed, the iPod may not be properly connected. Try connecting again.

NOTE

- Depending on the type of iPod and the software version, some functions may not operate.
- DENON will accept no responsibility whatsoever for any loss of iPod data.

Playback Music and Video

- 1 Use Δ ∇ to select "iPod", then press **ENTER** or \blacktriangleright .
- 2 Use Δ ∇ to select the menu, then press **ENTER** or \blacktriangleright to select the music or video file to be played.
- 3 Press **ENTER**, \blacktriangleright or $\blacktriangleright/\text{II}$
Playback starts.

Stopping playback temporarily

During playback, press **ENTER** or $\blacktriangleright/\text{II}$. Press again to resume playback.

Fast-forwarding or fast-reversing

During playback, either press and hold Δ (to fast-reverse), ∇ (to fast-forward), $\text{I}\blacktriangleleft\blacktriangleleft$ or $\blacktriangleright\blacktriangleright\text{I}$.

To cue to the beginning of a track

 
During playback, either press Δ (to cue to the previous track) or ∇ (to cue to the next track), or press $\text{I}\blacktriangleleft\blacktriangleleft$ or $\blacktriangleright\blacktriangleright\text{I}$.

To stop

During playback, either press and hold **ENTER**.

Playing repeatedly

Press **REPEAT** to switch the repeat mode.




GUI : "Setup" – "Other" – "Repeat"
(page 13)

"TV Out" at the iPod's "Slideshow Settings" or "Video Settings" must be set to "ON" in order to display the iPod's photo data or videos on the monitor. For details, see the iPod's operating instructions.

Shuffling playback

 Press **RANDOM** switch the shuffle mode.



GUI : "Setup" – "Other" – "Random"
(page 13)

To switch between the Browse and Remote modes

Either press and hold **BROWSE/REMOTE**.

❑ Browse mode

This mode is for operating by displaying the iPod information on the monitor connected to the ASD-3N.

In this mode, it is not possible to operate the iPod directly or to perform the operations associated with the slide show function. Set the Remote mode to play slide shows.

❑ Remote mode

This mode is for operating the iPod directly while watching the information displayed on the iPod's screen.

In this mode, the GUI operation guide is not displayed on the monitor.

Viewing Still Pictures on the iPod

Photo data on the iPod can be viewed on the monitor.

- 1 Press and hold **BROWSE/REMOTE** to set the Remote mode.
- 2 Use \triangle ∇ to select the menu, then press **ENTER** or \triangleright to select the file to be played.
- 3 Press **ENTER**, \triangleright or $\blacktriangleright/\parallel$ until the image you want to view is displayed.

"TV Out" at the iPod's "Slideshow Settings" or "Video Settings" must be set to "ON" in order to display the iPod's photo data or videos on the monitor. For details, see the iPod's operating instructions.

Playing Network Audio

This procedure can be used to play Internet radio stations or music or still picture (JPEG) files stored on a computer.

❑ About the Internet radio function

- Internet radio refers to radio broadcasts distributed over the Internet. Internet radio stations from around the world can be tuned in. The ASD-3N is equipped with the following Internet radio functions:
 - Stations can be selected by genre and region.
 - Internet radio stations in MP3 and WMA (Windows Media Audio) format can be listened to.
 - Your favorite radio stations can be registered by accessing an exclusive DENON Internet radio URL from a Web browser on a computer.
 - ※ The function is managed for individual users, so you must provide your MAC or e-mail address.
 - Exclusive URL: <http://www.radiodenon.com>
- The ASD-3N's Internet radio station list is created using a radio station database service (vTuner). This database service provides a list edited and created for the ASD-3N.
 - ※ The radio station database service may be suspended without notice.

❑ Music server

This function lets you play music files and playlists (m3u, wpl) stored on a computer (music server) connected to the ASD-3N via a network.

With the ASD-3N's network audio playback function, connection to the server is possible using one of the technologies below.

- Windows Media Player Network Sharing Service
- Windows Media DRM10

【Album art function】

When a WMA (Windows Media Audio), MP3 or MPEG-4 AAC file includes album art data, the album art can be displayed while the music files are playing.



For music files in WMA (Windows Media Audio) format, the album art is only played when using Windows Media Player ver. 11.

【Slide show function】

Still picture (JPEG) files stored in folders on a music server can be played as slide shows.

The time for which each picture is displayed can be set.



When still picture (JPEG) files are played on the ASD-3N, they are played in the direction in which they are stored in the folder, so store in them in the direction in which you want them to play.

Installing Windows Media Player ver. 11

- ① If Windows XP Service Pack 2 has not yet been installed, either download it free of charge from Microsoft or install it via a Windows update installer.
 - ② Download the latest version of Windows Media Player ver. 11, either directly from Microsoft or using a Windows update installer.
- ※ When using Windows Vista, there is no need to download a new version of Windows Media Player.

【Compatible formats】

	Internet radio	Music server ※
WMA (Windows Media Audio)	○	○
MP3 (MPEG-1 Audio Layer-3)	○	○
WAV	—	○
MPEG-4 AAC	—	○*
FLAC (Free Lossless Audio Codec)	—	○
JPEG	—	○

A server or server software compatible with distribution in the corresponding formats is required to play music files via a network.

*: Only files that are not protected by copyright can be played on the ASD-3N.


Contents downloaded from pay sites on the Internet are copyright protected. Also, files encoded in WMA format when ripped from a CD, etc., on a computer may be copyright protected, depending on the computer's settings.

※ The ASD-3N is compatible with MP3 ID3-Tag (Ver. 2) standards.
The ASD-3N is compatible with WMA META tags.

【Playable formats】

	Sampling frequency	Bit rate	Extension
WMA (Windows Media Audio)	32/44.1/48 kHz	48~192 kbps	.wma
MP3 (MPEG-1 Audio Layer-3)	32/44.1/48 kHz	32~320 kbps	.mp3
WAV	32/44.1/48 kHz	—	.wav
MPEG-4 AAC	32/44.1/48 kHz	16~320 kbps	.aac/.m4a/.mp4
FLAC (Free Lossless Audio Codec)	32/44.1/48 kHz	—	.flac

WAV format Quantization bit rate: 16 bits.

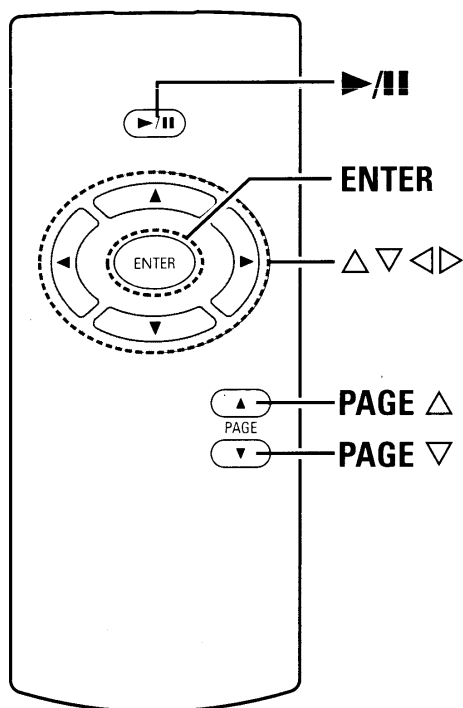

Basic Operation

1 Make the necessary preparations.

- ① Check the network environment, then turn on the ASD-3N's power.
(☞ page 7 "Network Audio")
- ② If settings are required, make the network settings.
(☞ page 11 "Network Setup")
- ③ Prepare the computer. (☞ Computer's operating instructions)
Install "Windows Media Player ver. 11"

2 Use Δ ∇ to select "Network", then press **ENTER** or \triangleright .

GUI : "Network" (☞ page 11)

3 Use Δ ∇ to select the menu, then press **ENTER** or \triangleright to select the file you want to play.

4 Press **ENTER** or \triangleright . Playback starts.

Stopping playback temporarily

During playback, press **ENTER** or \triangleright /**II**.


Press again to resume playback.

To stop

During the play or pause mode, press and hold **ENTER**.

Searching up or down pages

Press Δ (up) or **PAGE** ∇ (down).

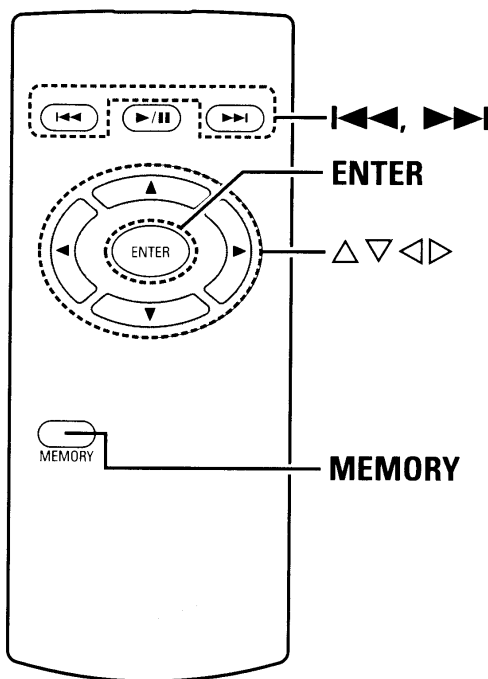

Listening to Internet Radio

- 1** Use $\Delta \nabla$ to select “Internet Radio”, then press **ENTER** or \triangleright .
- 2** Use $\Delta \nabla$ to select the item you want to play, then press **ENTER** or \triangleright .
The station list is displayed.
A “” mark is indicated in front of stations that can be played.
- 3** Use $\Delta \nabla$ to select the station, then press **ENTER** or \triangleright .
Playback starts.



There are many Internet radio stations on the Internet, and the quality of the programs they broadcast as well as the bit rate of the tracks varies widely. Generally, the higher the bit rate, the higher the sound quality, but depending on the communication lines and server traffic, the music or audio signals being streamed may be interrupted. Inversely, lower bit rates mean a lower sound quality but less tendency for the sound to be interrupted.

Recently Played Internet Radio Stations

Recently played internet radio stations can be selected from “Recently Played” in menu.

- 1** Use $\Delta \nabla$ to select “Recently Played”, then press **ENTER** or \triangleright .
- 2** Use $\Delta \nabla$ to select the item you want to play, then press **ENTER** or \triangleright .

NOTE

Up to 20 stations stored in “Recently Played”.

Registering Internet Radio Stations as Your Favorites

Favorites are listed at the top of the menu screen, so when a station is registered as a favorite it can be tuned in easily.

- 1** Press **MEMORY** while the Internet radio station you want to register is playing.
- 2** Press \triangleleft to select “Yes”.
The Internet radio station is registered.
If you do not want to register it, press \triangleright .

Listening to Internet Radio Stations Registered in Your Favorites



- 1** Use $\Delta \nabla$ to select “Favorites”, then press **ENTER** or \triangleright .
- 2** Use $\Delta \nabla$ to select the Internet radio station, then press **ENTER** or \triangleright .
The ASD-3N automatically connects to the Internet and playback begins.

Clearing Internet Radio Stations from Your Favorites

- 1** Use $\Delta \nabla$ to select “Favorites”, then press **ENTER** or \triangleright .
- 2** Use $\Delta \nabla$ to select the Internet radio station you want to clear, then press **MEMORY**.
- 3** Press \triangleleft to select “Delete”.
The selected Internet radio station is cleared.
To cancel the operation without clearing the station, press \triangleright .

Playing Files Stored on a Computer

Use this procedure to play music files, image files or playlists.

- 1** Use $\Delta \nabla$ to select the host name of the computer on which the music file you want to play is located, then press **ENTER** or \triangleright .
- 2** Use $\Delta \nabla$ to select the search item or folder, then press **ENTER** or \triangleright .
A “” mark is indicated in front of music files that can be played, and a “” mark is indicated in front of image files that can be played.
- 3** Use $\Delta \nabla$ to select the file, then press **ENTER** or \triangleright .
Playback starts.

Selecting tracks

 
During playback, either press Δ , \blacktriangleleft (previous track) or ∇ , \blacktriangleright (next track).



- When playing still picture (JPEG) files, files can also be selected using the operation described below. During playback, either press Δ , \blacktriangleleft (previous file) or ∇ , \blacktriangleright (next file).
- Connections to the required system and specific settings must be made in order to play music files (see page 7, 11).
- Before starting, you must launch the computer's server software and set the files as server contents. For details, see the operating instructions of your server software.
- Depending on the size of the still picture (JPEG) file, some time may be required for the file to be displayed.


Playing repeatedly

Press **REPEAT** to switch the repeat mode.



Playing in random order

 Press **RANDOM** to switch the random mode.



Playing files that have been Registered in Your Favorites

Files can be registered in your favorites and played using the same operations as for Internet radio stations.

NOTE

- When the operation described below is performed, the music server's database is updated and it may no longer be possible to play preset or favorite music files.
 - When you quit the music server and then restart it.
 - When music files are deleted or added on the music server.
 - When using an ESCIENT server, please "ESCIENT" before the server name.(North America only).

Other Information

About Networks

Windows Media Player Ver.11

This is a media player distributed free of charge by Microsoft Corporation.

It can be used to play playlists created with Windows Media Player Ver. 11 as well as files in such formats as WMA, DRM WMA, MP3 and WAV.

vTuner

This is a free online contents server for Internet radio. Note that usage fees are included in upgrade costs. For inquiries about this service, visit the vTuner site below.

vTuner website: <http://www.radiodenon.com>

This product is protected by certain intellectual property rights of Nothing Else Matters Software and BridgeCo. Use or distribution of such technology outside of this product is prohibited without a license from Nothing Else Matters Software and BridgeCo or an authorized subsidiary.

DLNA

- DLNA and DLNA CERTIFIED are trademarks and/or service marks of Digital Living Network Alliance.
- Some contents may not be compatible with other DLNA CERTIFIED™ products.

Windows Media DRM

A copyright-protected technology developed by Microsoft.

- Content providers are using the digital rights management technology for Windows Media contained in this device (WM-DRM) to protect the integrity of their content (Secure Content) so that their intellectual property, including copyright, in such content is not misappropriated. This device uses WM-DRM software to play Secure Content (WM-DRM Software). If the security of the WM-DRM Software in this device has been compromised, owners of Secure Content (Secure Content Owners) may request that Microsoft revoke the WM-DRM Software's right to acquire new licenses to copy, display and/or play Secure Content. Revocation does not alter the WM-DRM Software's ability to play unprotected content. A list of revoked WM-DRM Software is sent to your device whenever you download a license for Secure Content from the Internet or from a PC. Microsoft may, in conjunction with such license, also download revocation list onto your device on behalf of Secure Content Owners.

Troubleshooting

If a problem should arise, first check the following:

1. Are the connections correct?
2. Is the set being operated as described in the owner's manual?
3. Are the other components operating properly?

If this unit does not operate properly, check the items listed in the table below. Should the problem persist, there may be a malfunction. In this case, disconnect the power immediately and contact your store of purchase.

[General]

Symptom	Cause	Countermeasure	Page
No sound is produced. No image appears on the monitor.	<ul style="list-style-type: none"> The iPod is not playing. The iPod is not properly connected to the ASD-3N. The AC adapter is not connected to the ASD-3N or a power outlet. The AV/Control cable is not properly connected. The monitor's input selection is not properly set. 	<ul style="list-style-type: none"> Check that the iPod is playing. 	–
		<ul style="list-style-type: none"> Check that the iPod is properly connected to the ASD-3N's dock connector. 	–
		<ul style="list-style-type: none"> Check the connections. 	6
		<ul style="list-style-type: none"> Check the connections. Set the monitor's input selector to the proper position for the connected video input terminal. 	6 6

[Remote Control Unit]

Symptom	Cause	Countermeasure	Page
Set does not work properly when remote control unit operated.	<ul style="list-style-type: none"> Batteries are worn. You are operating outside of the specified range. Obstacle between main unit and remote control unit. The batteries are not inserted in the proper direction, as indicated by the polarity marks in the battery compartment. The set's remote control sensor is exposed to strong light (direct sunlight, inverter type fluorescent bulb light, etc.). 	<ul style="list-style-type: none"> Replace with new batteries. 	3
		<ul style="list-style-type: none"> Operate within the specified range. 	3
		<ul style="list-style-type: none"> Remove the obstacle. 	3
		<ul style="list-style-type: none"> Insert the batteries in the proper direction, following the polarity marks in the battery compartment. 	3
		<ul style="list-style-type: none"> Move the set to a place in which the remote control sensor will not be exposed to strong light. 	3

[NET]

Symptom	Cause	Countermeasure	Page
Internet radio cannot be played.	<ul style="list-style-type: none"> Ethernet cable is not properly connected or network is disconnected. Program is being broadcast in non-compatible format. The computer's or router's firewall is activated. Radio station is not currently broadcasting. IP address is wrong. 	• Check the connection status.	7
		• Only Internet radio programs in MP3 and WMA can be played on this set.	16
		• Check the computer's or router's firewall settings.	7
		• Choose a radio station that is currently broadcasting.	–
		• Check the set's IP address.	1
Files stored on a computer cannot be played.	<ul style="list-style-type: none"> Files are stored in a non-compatible format. You are attempting to play a file that is copyright protected. 	• Record in a compatible format.	16
		• Files that are copyright protected cannot be played on this set.	16
Server is not found, or it is not possible to connect to the server.	<ul style="list-style-type: none"> The computer's or router's firewall is activated. Computer's power is not turned on. Server is not running. Set's IP address is wrong. 	• Check the computer's or router's firewall settings.	7
		• Turn on the power.	–
		• Launch the server.	–
		• Check the set's IP address.	11
Cannot connect to preset or favorite radio stations.	<ul style="list-style-type: none"> Radio station is not currently broadcasting. Radio station is not currently in service. 	• Wait a while before trying again.	–
		• It is not possible to connect to radio stations that are no longer in service.	–
For some radio stations cannot be connected to.	• Station is congested or not currently broadcasting.	• Wait a while before trying again.	–
Sound is broken during playback.	• Network's signal transfer speed is slow or communications lines or radio station is congested.	• This is not a malfunction. When playing broadcast data with a high bit rate, the sound may be broken, depending on the communications conditions.	–
Sound quality is poor or played sound is noisy.	• File being played has a low bit rate.	• This is not a malfunction.	–

Specifications

❑ Control Dock for iPod

Power supply:	DC IN 6V
Maximum external dimensions:	120 (W) x 43.8 (H) x 120 (D) mm
Weight:	260 g
Terminal:	Analog audio output terminals x 1, S-Video output terminal x 1, Control terminal x 1 Ethernet terminal x 1

❑ AC Adapter (KSAFC0600150W1UV-1)

Rated voltage:	100 – 240 V, 50/60 Hz
Rated current:	0.3 A

❑ Remote control unit

(RC-1087 (WHITE), RC-1088 (BLACK))

Batteries:	CR2025 Type
Maximum external dimensions:	42.5 (W) x 100 (H) x 12 (D) mm
Weight:	35 g (Approx 4 oz) (including batteries)

※ For purposes of improvement, specifications and design are subject to change without notice.



DENON

www.denon.com

Denon Brand Company, D&M Holdings Inc.
Printed in China 00D 511 4728 008

DENON SERVICE NETWORK / 服務網絡

- Please consult the outlet where the equipment was purchased.
- Bitte wenden Sie sich an den Händler, bei dem Sie das Produkt gekauft haben.
- SVP veuillez consulter votre revendeur.
- Neemt u alstublieft contact op met het verkooppunt waar u de apparatuur heeft gekocht.
- Por favor consulte en el establecimiento donde compró el equipo.
- Vänligen ta kontakt med butiken där du köpt utrustningen.
- Rivolgetevi al rivenditore che vi ha venduto l'apparecchio.
- Contacte a loja onde comprou o equipamento.
- 請向你購入本機的商號查詢。
- 請向你所購買本機的商行查詢。

Australia	Audio Products Group Pty Ltd. 67 O'Riordan Street Alexandria NSW 2015, PO Box 150, Mascot NSW 1460 Australia Tel: 1300 134 400 Fax: +61 2 9578 0159
Austria	Digital-Professional-Audio Vertriebsges.m.b.H., Seeböckgasse 59, A-1160 Wien Tel: 01-480-1006 Fax: 01-485-7679
Belgium	Transtel-Sabima P.V.B.A. Duboisstraat 48, B-2060 Antwerpen, Belgium Tel: 03-237-3607
Canada	D&M CANADA INC. 5-505 Apple Creek Blvd., Markham, Ontario, L3R 5B1 Tel: 905-475-4085 Fax: 905-475-4159
China	电音数码音响贸易(上海)有限公司 上海市淮海中路887号永新大厦6010室 电话:(021)64372299 传真:(021)64339973 邮编: 200020 天龙客户服务热线: 021-62949285
Czech republic	EUROSTAR OSTRAVA s.r.o. areal Vodni stavby Praha, budova A2 Dobronicka 635, 148 00 Praha 4 Czech Rep. Tel: 261-112-901 Fax: 261-112-904
Denmark	Hifi Klubben A/S Dali Alle 1, 9610 Noerager, Denmark Tel: 45-96 72 10 00 Fax: 45-96 72 10 14
Finland	Soundata Oy Hameentie 157 5th floor 00560 Helsinki Finland Tel: +358-(0)9-4769 3300 Fax: +358-(0)9-4769 3310
France	DENON FRANCE A division of D&M France SAS Tour Ventose, 2 rue des Bourets, 92156 Suresnes Cedex, France Tel: +33(0)1-41-383230 Fax: +33(0)1-41-380110
Germany	DENON DEUTSCHLAND A division of D&M Germany GmbH An der Landwehr 19, D-41334 Nettetal, Germany Tel: +49(0)2157-1208-0 Fax: +49(0)2157-1208-10
Greece	KINOTECHNIKI LTD. 14, PYRGOU STR. 166 75, GLYFADA ATHENS Tel: +30 210 960 1071 Fax: +30 210 960 1072
Hong Kong	D&M Sales and Marketing (H.K.) Ltd. Unit 501, Ocean Centre, Harbour City, 5 Canton Road, Tsimshatsui, Kowloon, Hong Kong Tel: 852-2516-5864 Fax: 852-2516-5940 香港九龍尖沙咀廣東道5號海港城海洋中心5樓501室 電話: 852-2516-5864 傳真: 852-2516-5940
Hungary	A.I.D.A. Audio Kft. 1112 Budapest Olt u. 37. Hungary Tel: 01-248-2030 Fax: 01-248-2039
Iceland	Einar Farestreet & co hf., Borgartun 28, P.Box 5440, 125 Reykjavik. Tel: +354 5207900 Fax: +354 5207910
India	Pro FX Dynamic House. 64, Church Street, Bangalore-560 001, India Tel: +91-80-5768-6722 Fax: +91-80-2559-4298
Indonesia	PT Autoaccindo Jaya. Cideng Barat No. 7 Jakarta, Indonesia Tel: +62-21-633-2730 Fax: +62-21-632-2886
Israel	Newpan Ltd. 14 Rosansky st. Rishon Lezion 75706, Israel. Tel: +972-3-953-5900 Fax: +972-3-961-6193
Italy	Audiodelta S.r.l. 19 Via Pietro Calvi 20129 Milano Italy Tel: 39-02-5411-6008 / 39-02-5412-8253 Fax: 39-02-5412-0258
Korea	D&M Sales and Marketing Korea Ltd. Chung Jin B/D., 10F, 53-5, Wonhyoro 3 Ga, Yongsan-Gu, Seoul, 140-719, Korea Tel: 02-715-9041 Fax: 02-715-9040
Malaysia	Wo Kee Hong Trading Sdn Bhd. 2nd Floor, (Left Wing), Bangunan Infinite Centre, Lot 1, Jalan 13/6, 46200 Petaling Jaya, Selangor Darul Ehsan, Malaysia Tel: 03-7954-8088 Fax: 03-7954-7088
Mexico	Labrador, S.A. de C.V. Callejon del Naranjo 35, Naucalpan, 53560, Edo. Mex., Mexico Tel: 52-5359-5161 Fax: 52-5357-1775
Netherlands	Penhold B.V. Poppenbouwing 58, NL-4191 NZ Geldermalsen, Netherland Tel: 31-345-588 080 Fax: 31-345-588 085
New Zealand	Avalon Pacific Marketing Limited. 15c Vestey Drive, Mt Wellington, Auckland, New Zealand. PO Box 11 631 Ellerslie, Auckland, New Zealand Tel: +64-9-573-5933 Fax: +64-9-573-3720
Norway	Hi-Fi Klubben Marcus Thranes gate 4-6, 0473 Oslo, Norway Tel: +47 22 80 63 10 Fax: +47 22 80 63 29
Philippines	Lotteworld Audio Video Systems Incorporated CET Building Mezzanine Floor No. 4 Mindanao Avenue, Barangay Bahay Toro, Project 8, Quezon City, Philippines. Tel: +632-929-5334 Fax: +632-929-1343
Poland	HORN DISTRIBUTION S.A. Ulica Kurantow 34, 02-873 Warszawa Poland Tel: +48 22 331 55 33 Fax: +48 22 331 55 00
Portugal	Videoacustica Qta. Do Paizinho-Armazém 5-Estrada De Circunvalação-Apart. 3127 1303 Lisboa Codex Tel: +351 214241770 Fax: +351 214188093
Singapore	ALL (E&E) Service Center Pte Ltd. Machtech Industrial Building, #06-04, No.2, Kallang Pudding Road, Singapore 349307 Tel: 6747-8274 Fax: 6748-9007
Slovakia	BIS AUDIO s.r.o. Dobronivská cesta 1642/6 960 01 Zvolen Tel:045-5400 703 Fax:045-5400 704
South Africa	Mandarin Distributors S.A. 10 Thora Crescent, Wynberg Ext.3 Sandton, P.O.Box 5137, Johannesburg Republic of South Africa Tel: 27-11-444-8445 Fax: 27-11-444-8363
Spain	Gaplasa S.A. AV. Ing. Conde de Torroja, 25, 28022 Madrid Tel: 91-746-00-45 Fax: 91-329-44-57
Sweden	Hi-Fi Klubben Göteborg Skänegatan 25, 41252 Göteborg Tel:031 33 51010 Fax:031 33 51019
Switzerland	KOENIG APPARATE AG, Abteilung Elektronik. Eggbühlstrasse 28, CH-8052 Zürich, Switzerland Tel: 01-306-1626 Fax: 01-306-1690
Taiwan R.O.C.	KOLIN-DENON Entertainment INC. 5F-3, No. 14, Shiwei Street, Sanchung City, Taipei Hsien, 241 Taiwan, R.O.C. 歌林天龍音響事業股份有限公司 台北縣三重市溪尾街14號5F之3 電話: (02)8287-2618 傳真: (02)8287-1384 Realise Tech-Service Co., Ltd. 2F, No. 14, Shiwei Street, Sanchung City, Taipei Hsien, 241 Taiwan, R.O.C. 瑞林科技服務股份有限公司 台北縣三重市溪尾街14號2F 電話(代表號): (02)8287-6668 傳真: (02)8287-6272
Thailand	Mahajak Development Co., Ltd. 46 Mahajak Building, Sukhumvit Soi 3 (Nana-Nua) Klongtoey, Wattana, Bangkok Thailand. 10110 Tel: 66-2-256-0020 Fax: 66-2-253-1696
Turkey	Ertekin elektronik tic. ve san. a.s. Galipdede Caddesi No.: 113 Kuledibi-Karaköy / Istanbul, Turkey Tel: +90(212)293-9515 Fax: +90(212)249-3512
U.A.E.	V.V. & SONS L.L.C. Street No-11/B, Road NO-128, Shed No-39 Al Khabisi, Deira, Dubai, U.A.E Tel: +971-4-266-2435, 268-4575 Fax: +971-4-266-2052
Ukraine	Mirs Ltd. Osipova str. 37/Office 1, 65012 Odessa, Ukraine Tel: +380 (482) 305530 Fax: +380 (482) 305555
United Kingdom & Eire	DENON UK A division of D&M Audiovisual Ltd. Moorbridge House, Padbury Oaks, 579 Bath Road, Longford, Middlesex, UB7 0EH, United Kingdom Tel: +44(0)1753-680568 Fax: +44(0)1753-689697
U.S.A.	DENON ELECTRONICS (USA), LLC (a D&M Holdings Company) 100 Corporate Drive, Mahwah, NJ 07430-2041 Tel: 800-497-8921 Fax: 888-544-8434
Vietnam	Anh Duy Manufacturing -- Trading Co., Ltd. 170 Ung Van Kheim St., Ward 25, Binh Thanh Dist., HCMC, Vietnam Tel: +84 8 898 3424 Fax: +84 8 898 3425

- * If there is no service center in your local area, please contact one of our overseas service centers, listed above, for follow-up service consultation.
- * Ist kein Service-Center in Ihrer Nähe, setzen Sie sich bitte mit einem der hier aufgelisteten Adressen in Verbindung.
- * Si il n'y a pas de station technique proche de chez vous, veuillez contacter nos l'un de nos centres techniques, listés ci-dessous, pour toutes demandes techniques.
- * Als er geen servicecenter bij u in de buurt is, neem dan contact op een een van onze bovengenoemde servicecenters voor ondersteuning.
- * Si no hay un servicio técnico en su zona, por favor contacte con uno de los servicios técnicos centrales, indicados abajo, para realizar un seguimiento de su consult.
- * Om det inte finns någon auktoriserad Denon-verkstad där du bor, kontakta en av våra internationella servicecentra (se ovan).
- * Se non ci sono dei centri assistenza autorizzati nella vostra zona, potete fare riferimento agli altri centri assistenza autorizzati, vedi elenco sopra, per qualsiasi consultazione tecnica.
- * Caso não exista um centro de assistência técnica na sua área, consulte um dos centros acima apresentados
- * 如若當地並無服務中心，請據上表所列本公司海外服務中心查詢售後服務事宜。
- * 若当地无服务中心，请联系上述所列我们的海外服务中心，以便跟踪服务咨询。

DENON

www.denon.com

Denon Brand Company, D&M Holdings Inc.

00D 515 0921 801 611

ENGLISH

page 15

 
Shuffling playback

Press **RANDOM** switch the shuffle mode.



Shuffling playback

Press **RANDOM** switch the shuffle mode.



DEUTSCH

Seite 15

Shuffle-Wiedergabe

Drücken Sie **RANDOM**, um in den Shuffle-Modus zu wechseln.



Shuffle-Wiedergabe

Drücken Sie **RANDOM**, um in den Shuffle-Modus zu wechseln.



FRANCAIS

page 15

 
Lecture aléatoire

Appuyez sur **RANDOM** pour passer en mode aléatoire.



Lecture aléatoire

Appuyez sur **RANDOM** pour passer en mode aléatoire.



ITALIANO

pagina 15

 
Riproduzione casuale

Premere il tasto **RANDOM** per passare alla modalità di selezione casuale del brano.



Riproduzione casuale

Premere il tasto **RANDOM** per passare alla modalità di selezione casuale del brano.



ESPAÑOL

página 15


Reproducción aleatoria de pistas

Pulse **RANDOM** para cambiar el modo aleatorio.



Reproducción aleatoria de pistas

Pulse **RANDOM** para cambiar el modo aleatorio.

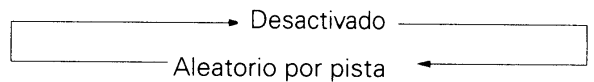

NEDERLANDS

blz. 15

Shuffling playback

Druk op **RANDOM** om de willekeurige weergavemodus om te schakelen.



Weergave in willekeurige volgorde

Druk op **RANDOM** om de willekeurige weergavemodus om te schakelen.



SVENSKA

sidan 15

 
Blandadansspelning

Tryck på **RANDOM** för att byta till shuffle-läget.



Blanda uppspelning

Tryck på **RANDOM** för att byta till shuffle-läget.



DENON

www.denon.com

Denon Brand Company, D&M Holdings Inc.

Printed in China 5431 10004 000D

DENON[®]

LIMITED WARRANTY

(USA / CANADA)

	PAGE
USA (ENGLISH)	2
CANADA (ENGLISH)	3
CANADA (FRENCH)	4

USA		
DENON ELECTRONICS (USA), LLC (a D&M Holdings Company) 100 Corporate Drive Mahwah, NJ 07430-2041 (800) 497-8921 (888) 544-8434 Fax		
DENON REGIONAL SUPER SERVICE CENTERS (Repair only-No parts orders please)		
PYRAMID AUDIO 305 E. Braker Lane Austin, TX 78753-2746 (512) 458-8292 (512) 453-4542 Fax	UNITED RADIO SERVICE 5717 Enterprise Parkway E. Syracuse, NY 13057-2905 (800) 634-8606 (315) 446-8505 Fax	AUDIO SERVICES 544 Central Dr., Suite 101 Virginia Beach, VA 23454-5245 (757) 498-8277 (757) 498-9554 Fax
INNER SOUND 1416 S.E. Morrison Street Portland, OR 97214-2646 (503) 238-1955 (503) 238-1787 Fax	NORMAN'S ELECTRONICS 3653 Clairmont Road Atlanta, GA 30341-4907 (770) 451-5057 (770) 455-8337 Fax	GOLD CROWN ELECTRONICS Victoria Business Park 129 E. Savarona Way Carson, CA 90746-1406 (310) 538-8282 (310) 538-8281 Fax
SERVICE WIDE TECHNOLOGIES 2239 Curtiss Street Downers Grove, IL 60515-4010 (630) 969-7333 (630) 969-7330 Fax	ELECTRONICE EXPRESS 1809 E. Fabyan Parkway West Chicago, IL 60185 (630) 208-4600 (630) 208-4601 Fax	

CANADA
D&M CANADA INC. 5-505 Apple Creek Boulevard Markham Ontario, L3R 5B1 (905) 475-4085 (905) 475-4159 Fax

This warranty will be honored only in the U.S.A

DENON®

LIMITED WARRANTY

Length of Non-Transferable Warranty

This warranty on your DENON product which is distributed and warranted by DENON ELECTRONICS (USA), LLC remains in effect for the following periods from the date of the original consumer purchase from an AUTHORIZED DENON ELECTRONICS (USA), LLC DEALER.

Product Category

A / V Controller, A / V Receiver, AM / FM Receiver			AVC, AVR, DRA	2	YEAR(S)
DVD Receiver, DVD Home Theater System			ADV, S	1	
Digital Surround Decoder			AVD	3	
Pre-Amplifier, Digital Pre-Amplifier Power-Amplifier, Head Amplifier			PRA, AVP, DAP, POA, HA	3	
Tuner, Integrated Amplifier			TU, PMA	3	
CD Player, DVD Player			DCD, DCM, DP, DA, DVD, DVM	1	
Tape Recorder, CD Recorder, MD Recorder			DRM, DRR, DRS, DRW, CDR, CDRW, DMD	1	
System Audio			D (UPA, UTU, UDCM, UDR, USC, USR, UCD, UDRA) D-A, D-F, D-G, D-M, CDR-M, DRR-M, S	1	
Turntable	1	Autolift / Manual	DP-L, DP-M	4	
	2	Full Automatic	DP-F	2	
Speaker			SC	1	
Sub-woofer			DSW	2	
Network Multimedia Server / Client (Hard Disc Only)	1	Excluded Hard Disk Drive Unit	NS	3	
	2	Hard Disk Drive Unit	-	1	
Microphone			DM-S	2	
Control Dock for iPod®			ASD	1	
Headphone			AH-D, AH-C	1	
Cartridge			DL	90	DAYS
Remote Controller			RC	90	

iPod is a trademark of Apple Computer, Inc., registered in the U.S. and other countries.

What is Covered

Except as specified below, this Warranty covers all defects in material and workmanship in this product occurring during the above warranty periods. The following are not covered by the Warranty: (1) Any product which is not distributed in the U.S.A. by DENON ELECTRONICS (USA), LLC. (2) Any product which is not purchased in the U.S.A. from an authorized DENON dealer, unless the product is purchased through the U.S.A. Military Exchange Service where the Warranty will be One (1) year for all products listed above except in the case of Cartridges, Accessories, Remote Controller and Headphone which will remain at 90 days. (Note: AUTHORIZED DENON DEALERS can be identified by DENON AUTHORIZED DEALER sticker displayed in the stores. If you are uncertain as to whether a dealer is a DENON AUTHORIZED DEALER, please contact DENON as listed below). (3) Any product on which the serial number has been defaced, modified or removed. (4) Damaged deterioration or malfunction resulting from: a) Accident, act of nature, abuse, misuse, neglect, unauthorized product repair, opening of or modification or failure to follow instructions supplied with the product. b) Repair or attempted repair by anyone not authorized by DENON. c) Any shipment of the product (claim must be presented to carrier). (5) Items subject to wear from normal usage (tape heads, cartridges, stylus, battery, etc.). (6) Periodic check-ups which do not disclose any defect. (7) Use of the product outside the U.S.A. (8) Damaged magnetic tape or CD/DVD discs. (9) Use in industrial, commercial, and/or professional applications. (10) Any installation or removal charges resulting from product failure.

What We Will Pay For

If during the applicable warranty period from the date of original consumer purchase your DENON product is found to be defective by DENON, DENON will repair, or at its option, replace with new, used or equivalent model, such defective product without charge for parts or labor.

How to Obtain Warranty Performance

If your unit ever needs service, it may be taken or shipped to any authorized DENON service station or DENON ELECTRONICS (if you are uncertain as to whether a service station is DENON authorized, please contact DENON as listed below.) In all other cases, the following procedures apply whenever your unit must be transported for warranty service:

- You are responsible for transporting your unit or arranging for its transportation.
- If shipment of your unit is required:
You must pay the initial shipping charges, but we will pay the return shipping charges if the repairs are covered by the Warranty.
WHEN RETURNING YOUR UNIT FOR WARRANTY SERVICE, A COPY OF THE ORIGINAL SALES SLIP MUST BE ATTACHED.
- You should include the following: your name, address, daytime telephone number, model and serial number of the product and a description of the problem. In the case of a CD or DVD Player, please enclose ONE (1) disc that the unit has failed with for test reasons. It will be returned with the unit.

THIS WARRANTY IS VALID IN THE U.S.A. ONLY.

If your product does not require service, but you have questions regarding its operation, please contact our Technical Services Department as listed below.

THIS WARRANTY IS EXPRESSLY MADE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

OUR LIABILITY IS LIMITED TO THE REPAIR OR REPLACEMENT, AT OUR OPTION, OF ANY DEFECTIVE PRODUCT AND SHALL IN NO EVENT INCLUDE INCIDENTAL OR CONSEQUENTIAL COMMERCIAL OR PROPERTY DAMAGES OF ANY KIND. WE ARE NOT RESPONSIBLE FOR PRODUCTS LOST, STOLEN AND/OR DAMAGED DURING SHIPPING.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND/OR DO NOT ALLOW THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights, but you may also have other rights which vary from state to state. This Warranty may not be altered other than in a writing signed by an officer of Denon Electronics USA, LLC.

DENON ELECTRONICS (USA), LLC
(a D&M Holdings Company)
100 Corporate Drive
Mahwah, NJ 07430-2041
(800) 497-8921
www.usa.denon.com

This warranty will be honored only in Canada.

DENON®

LIMITED WARRANTY

Length of Non-Transferable Warranty

This warranty on your DENON product which is distributed and warranted by D&M CANADA INC. remains in effect for the following periods from the date of the original consumer purchase from an AUTHORIZED D&M CANADA INC. DEALER.

Product Category

Turntable	1	Autolift	DP-L	4	YEARS
	2	Full Automatic	DP-F	2	
Tuner, Integrated Amplifier			TU, PMA	3	
Pre-Amplifier, Digital Pre-Amplifier Power-Amplifier, Head Amplifier			PRA, AVP, DAP, POA, HA	3	
Digital Surround Decoder			AVD	3	
Network Multimedia Server / Client	1	Excluded Hard Disk Drive Unit	NS	3	
	2	Hard Disk Drive Unit	-	1	
A / V Controller, A / V Receiver, AM / FM Receiver			AVC, AVR, DRA	2	
DVD Receiver, DVD Home Theater System			ADV, S	1	
CD Player, DVD Player			DCD, DCM, DP, DA, DVD, DVM	1	
Tape Recorder, CD Recorder, MD Recorder			DRM, DRR, DRS, DRW, CDR, CDRW, DMD, DTR	1	
System Audio			D (UPA, UTU, UDCM, UDR, USC, USR, UCD, UDRA) D-M, D-A, D-G, CDR-M, DRR-M, S	1	
Speaker			SC	1	
Sub-woofer			DSW	2	
Karaoke System			DCG, HMA	1	
Microphone			DM-S	2	
Control Dock for iPod®			ASD	1	
Headphone			AH-D, AH-C	1	
Cartridge, Accessories			DL, AU, DM-K, DME	90	DAYS
Remote Controller			RC	90	

What is Covered

Except as specified below, this Warranty covers all defects in material and workmanship in this product occurring during the above warranty periods. The following are not covered by the Warranty: (1) Any product which is not distributed in Canada by D&M CANADA INC. (2) Any product which is not purchased in Canada from an authorized DENON dealer. (Note: AUTHORIZED DENON DEALERS can be identified by DENON AUTHORIZED DEALER sticker displayed in the stores. If you are uncertain as to whether a dealer is a DENON AUTHORIZED DEALER, please contact D&M CANADA INC. as listed below). (3) Any product on which the serial number has been defaced, modified or removed. (4) Damaged deterioration or malfunction resulting from: a) Accident, act of nature, abuse, misuse, neglect, unauthorized product repair, opening of or modification or failure to follow instructions supplied with the product. b) Repair or attempted repair by anyone not authorized by DENON. c) Any shipment of the product (claim must be presented to carrier). (5) Items subject to wear from normal usage (tape heads, cartridges, stylus, battery, etc.). (6) Periodic check-ups which do not disclose any defect. (7) Use of the product outside Canada. (8) Damaged magnetic tape or CD/DVD discs. (9) Use in industrial, commercial, and/or professional applications. (10) Any installation or removal charges resulting from product failure.

What We Will Pay For

If during the applicable warranty period from the date of original consumer purchase your DENON product is found to be defective by DENON, DENON will repair, or at its option, replace with new, used or equivalent model, such defective product without charge for parts or labor.

How to Obtain Warranty Performance

If your unit ever needs service, it may be taken or shipped to any authorized DENON service station or D&M CANADA INC. (if you are uncertain as to whether a service station is DENON authorized, please contact D&M CANADA INC. as listed below.) In all other cases, the following procedures apply whenever your unit must be transported for warranty service:

- You are responsible for transporting your unit or arranging for its transportation.
- If shipment of your unit is required;
You must pay the initial shipping charges, but we will pay the return shipping charges if the repairs are covered by the Warranty.
- WHEN RETURNING YOUR UNIT FOR WARRANTY SERVICE, A COPY OF THE ORIGINAL SALES SLIP MUST BE ATTACHED.
- You should include the following: your name, address, daytime telephone number, model and serial number of the product and a description of the problem. In the case of a CD or DVD Player, please enclose ONE (1) disc that the unit has failed with for test reasons. It will be returned with the unit.

THIS WARRANTY IS VALID IN CANADA ONLY.

If your product does not require service, but you have questions regarding its operation, please contact our Technical Services Department as listed below.

THIS WARRANTY IS EXPRESSLY MADE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

OUR LIABILITY IS LIMITED TO THE REPAIR OR REPLACEMENT, AT OUR OPTION, OF ANY DEFECTIVE PRODUCT AND SHALL IN NO EVENT INCLUDE INCIDENTAL OR CONSEQUENTIAL COMMERCIAL OR PROPERTY DAMAGES OF ANY KIND. WE ARE NOT RESPONSIBLE FOR PRODUCTS LOST, STOLEN AND/OR DAMAGED DURING SHIPPING.

SOME PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND/OR DO NOT ALLOW THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights, but you may also have other rights which vary from province to province. This Warranty may not be altered other than in a writing signed by an officer of D&M Canada Inc.

D&M CANADA INC.
5-505 Apple Creek Boulevard
Markham, Ontario
L3R 5B1
(905) 475-4085
www.denon.ca

Cette garantie ne sera honorée qu'au **Canada**.

DENON®

GARANTIE LIMITÉE

Durée du garantie non-transférable

La garantie de votre produit DENON, distribué et garanti par D&M CANADA INC. prend effet à partir de la date d'achat du consommateur original auprès d'un revendeur officiel D&M CANADA INC. pendant les périodes suivantes.

Catégorie de produit

Table tournante	1	Levée auto	DP-L	4	ANNÉES
	2	Auto complet	DP-F	2	
Syntoniseur, amplificateur intégré			TU, PMA	3	
Préamplificateur, préamplificateur numérique			PRA, AVP, DAP, POA, HA	3	
Amplificateur de puissance, Préamplificateur phono					
Décodeur surround numérique			AVD	3	
Serveur / Client de réseau multimédia	1	Excluant le mécanisme du disque dur	NS	3	
	2	Le mécanisme du disque dur	-	1	
Contrôleur A / V, Récepteur A / V, Récepteur AM / FM			AVC, AVR, DRA	2	
Récepteur DVD, Système DVD Home Theater			ADV, S	1	
Lecteur CD, Lecteur DVD			DCD, DCM, DP, DA, DVD, DVM	1	
Magnétocassette, Enregistreur CD, Enregistreur MD			DRM, DRR, DRS, DRW, CDR, CDRW, DMD, DTR	1	
Système Audio			D (UPA, UTU, UDCM, UDR, USC, USR, UCD, UDRA) D-M, D-A, D-G, CDR-M, DRR-M, S	1	
Haut-parleurs			SC	1	
Sub-woofer			DSW	2	
Systèmes Karaoke			DCG, HMA	1	
Micro			DM-S	2	
Dock de contrôle pour iPod®			ASD	1	
Casque d'écoute			AH-D, AH-C	1	
Cellule phonolectrice, Accessoires			DL, AU, DM-K, DME	90	JOURS
Télécommande			RC	90	

Apple et iPod sont des marques commerciales d'Apple Computer, Inc., déposées aux États-Unis et dans d'autres pays.

Couverture

Cette garantie couvre tous les défauts de matériel ou de fabrication du produit, à l'exception de ceux indiqués ci-après qui conformément selon les termes durant la période de la garantie. Ne sont pas couverts par la garantie: (1) Tout produit qui n'est pas distribué au Canada par D&M CANADA INC. (2) Tout produit qui n'a pas été acheté au Canada auprès d'un revendeur officiel DENON (Note: On peut identifier les revendeurs officiels DENON par leur auto-collant "REVENDEUR OFFICIEL DENON" affiché dans leur magasin. Si vous doutez qu'un revendeur soit officiellement reconnu, contactez D&M CANADA INC. à l'adresse ci-dessous.) (3) Tout produit dont le numéro de série a été effacé, modifié ou enlevé. (4) Dommages dus à la détérioration ou à un fonctionnement défectueux à la suite de: a) accident, acte de la nature, abus, utilisation impropre, négligence, réparation au moyen d'un produit non autorisé, débalé, modification, emploi contraire aux instructions fournies avec le produit, b) réparation ou tentative de réparation par quelqu'un non reconnu par DENON. c) tout envoi du produit (la réclamation doit être présentée au transporteur). (5) Articles sujets à détérioration par l'usage (têtes de magnétophone, cellules phono, pointes de lecture phono, piles, etc.). (6) Vérification périodique qui ne révèle aucun défaut. (7) Utilisation du produit hors du Canada. (8) Bandes magnétiques, disques CD ou DVD endommagés. (9) Utilisation commerciale, industrielle ou professionnelle. (10) Toutes charges d'installation ou de déplacement résultant d'un défaut du produit.

Notre paiement

Si votre produit DENON est reconnu défectueux par DENON durant la période d'application de la garantie après la date d'achat du consommateur, DENON réparera ou, à son choix, remplacera avec un modèle neuf, usagé ou équivalent ce produit défectueux sans frais de pièces ni de main d'œuvre.

Exécution de la garantie

Si votre produit nécessite service, il peut être envoyé à tout atelier de service officiel DENON ou chez D&M CANADA INC. (Si vous doutez que l'atelier de service soit officiellement reconnu, contactez D&M CANADA INC. à l'adresse ci-dessous). Dans tous les autres cas, les procédures suivantes s'appliquent si votre article doit être transporté pour un service sous garantie.

- Vous êtes responsable du transport de votre article ou vous devez vous arranger vous-même pour son transport.
- Si votre article doit être envoyé, vous devez payer les frais d'envoi initiaux, mais nous payerons les frais de retour si la garantie couvre les réparations.
- LORSQUE VOUS RENVOYEZ VOTRE ARTICLE POUR UN SERVICE SOUS GARANTIE, VOUS DEVEZ JOINDRE UNE COPIE DE LA FACTURE D'ACHAT D'ORIGINE.**
- Vous devez inclure également vos nom, adresse, numéro de téléphone de jour, numéros de modèle et de série du produit et une description du problème. Dans le cas d'un lecteur CD ou DVD, joindre un disque que l'appareil n'a pu lire pour test. Il vous sera retourné avec l'article.

CETTE GARANTIE EST VALABLE SEULEMENT AU CANADA.

Si votre produit ne requiert aucun service mais que vous avez des questions quant à son fonctionnement, contactez notre département technique dont l'adresse figure ci-dessous.

CETTE GARANTIE EST EXPRESSÉMENT FAITE EN LIEU ET PLACE DE TOUTES LES AUTRES GARANTIES EXPRIMÉES OU SOUS-ENTENDUES Y COMPRIS, SANS SE LIMITER À CELLES-CI, LES GARANTIES MARCHANDES ET SPÉCIFIQUES POUR UN USAGE PARTICULIER.

NOTRE RESPONSABILITÉ SE LIMITE À LA RÉPARATION OU AU REMPLACEMENT, À NOTRE CHOIX, DE TOUT PRODUIT DÉFECTUEUX ET N'INCLUT EN AUCUN CAS DES DOMMAGES FORTUITS, COMMERCIAUX INDIRECTS NI MATÉRIELS D'AUCUNE SORTE. NOUS NOUS SOMMES PAS RESPONSABLES POUR LA PERTE DE LES PRODUITS ET/OU LES MARCHANDISES ENDOMMAGÉES PENDANT LE TRANSPORT DES BIENS.

CERTAINES PROVINCES NE PERMETTENT PAS DE LIMITES QUANT À LA DURÉE D'UNE GARANTIE SOUS-ENTENDUE ET/OU NE PERMETTENT PAS L'EXCLUSION DE DOMMAGES FORTUITS. LES LIMITATIONS ET EXCLUSIONS MENTIONNÉES PLUS HAUT PEUVENT NE PAS S'APPLIQUER À VOTRE CAS.

Cette garantie vous donne des droits légaux spécifiques, mais il se pourrait que vous ayez d'autres droits qui varient d'une province à l'autre. La garantie ne peut être modifiée que par un document signé par un gestionnaire autorisé de D&M Canada.

D&M CANADA INC.
5-505 Apple Creek Boulevard
Markham, Ontario
L3R 5B1
(905) 475-4085
www.denon.ca